


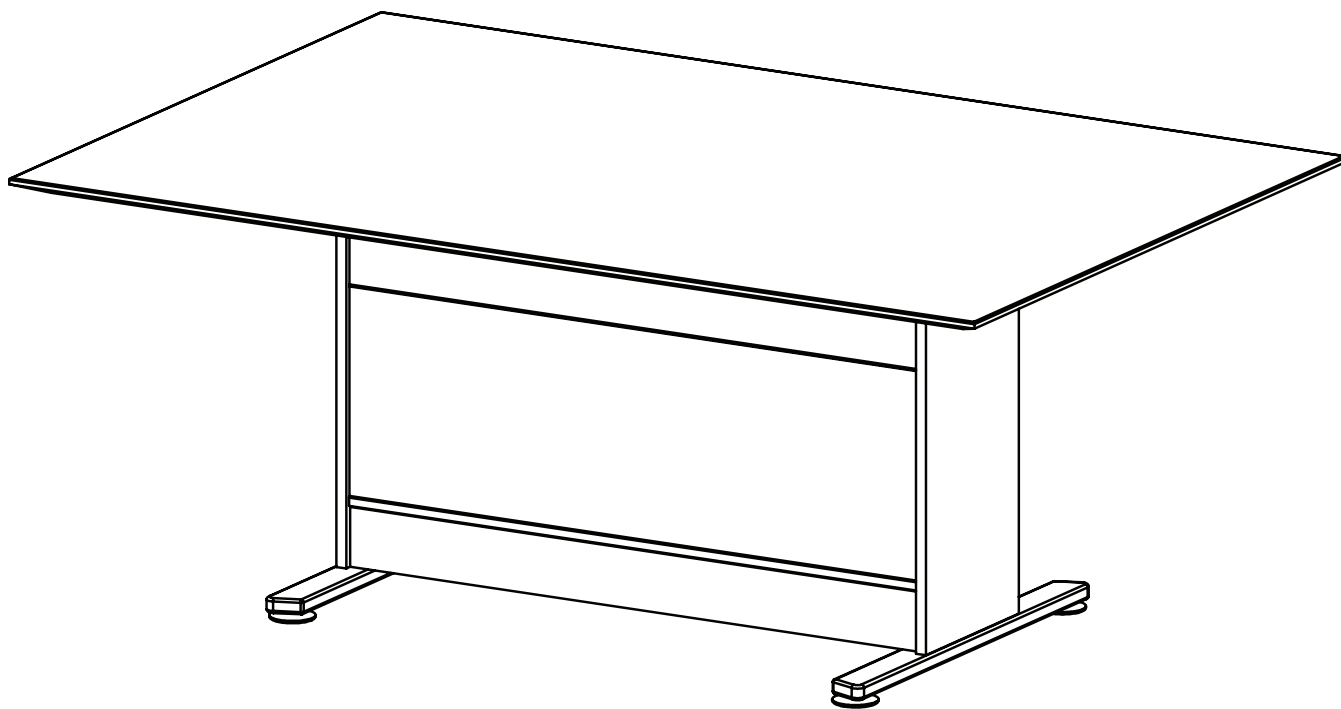

## ASSEMBLY INSTRUCTION

# UNIFI™ MEETING TABLE



### LIMITED WARRANTY FOR COMMERCIAL UNIFI MEETING TABLE


Salamander is proud to stand behind our products with industry-leading warranties. Should you ever encounter any problem with your Salamander product, let us know. We are here to make it right. 1.860.761.9500

Full warranty including limitations and warranty claim information may be found at [www.salamandercommercial.com/warranty](http://www.salamandercommercial.com/warranty)





# 1. JOINING PEDESTALS (IF APPLICABLE)

- A. First remove the Lift-Off Panel. See figure 2 on page 4.
- B. Slide the two halves together and make sure the front base surfaces are flush.
- C. Insert two 1/4-20 x 2" joint connector bolts through the top holes and two bolts through the third hole from the bottom. Secure the two table halves using the hex key.

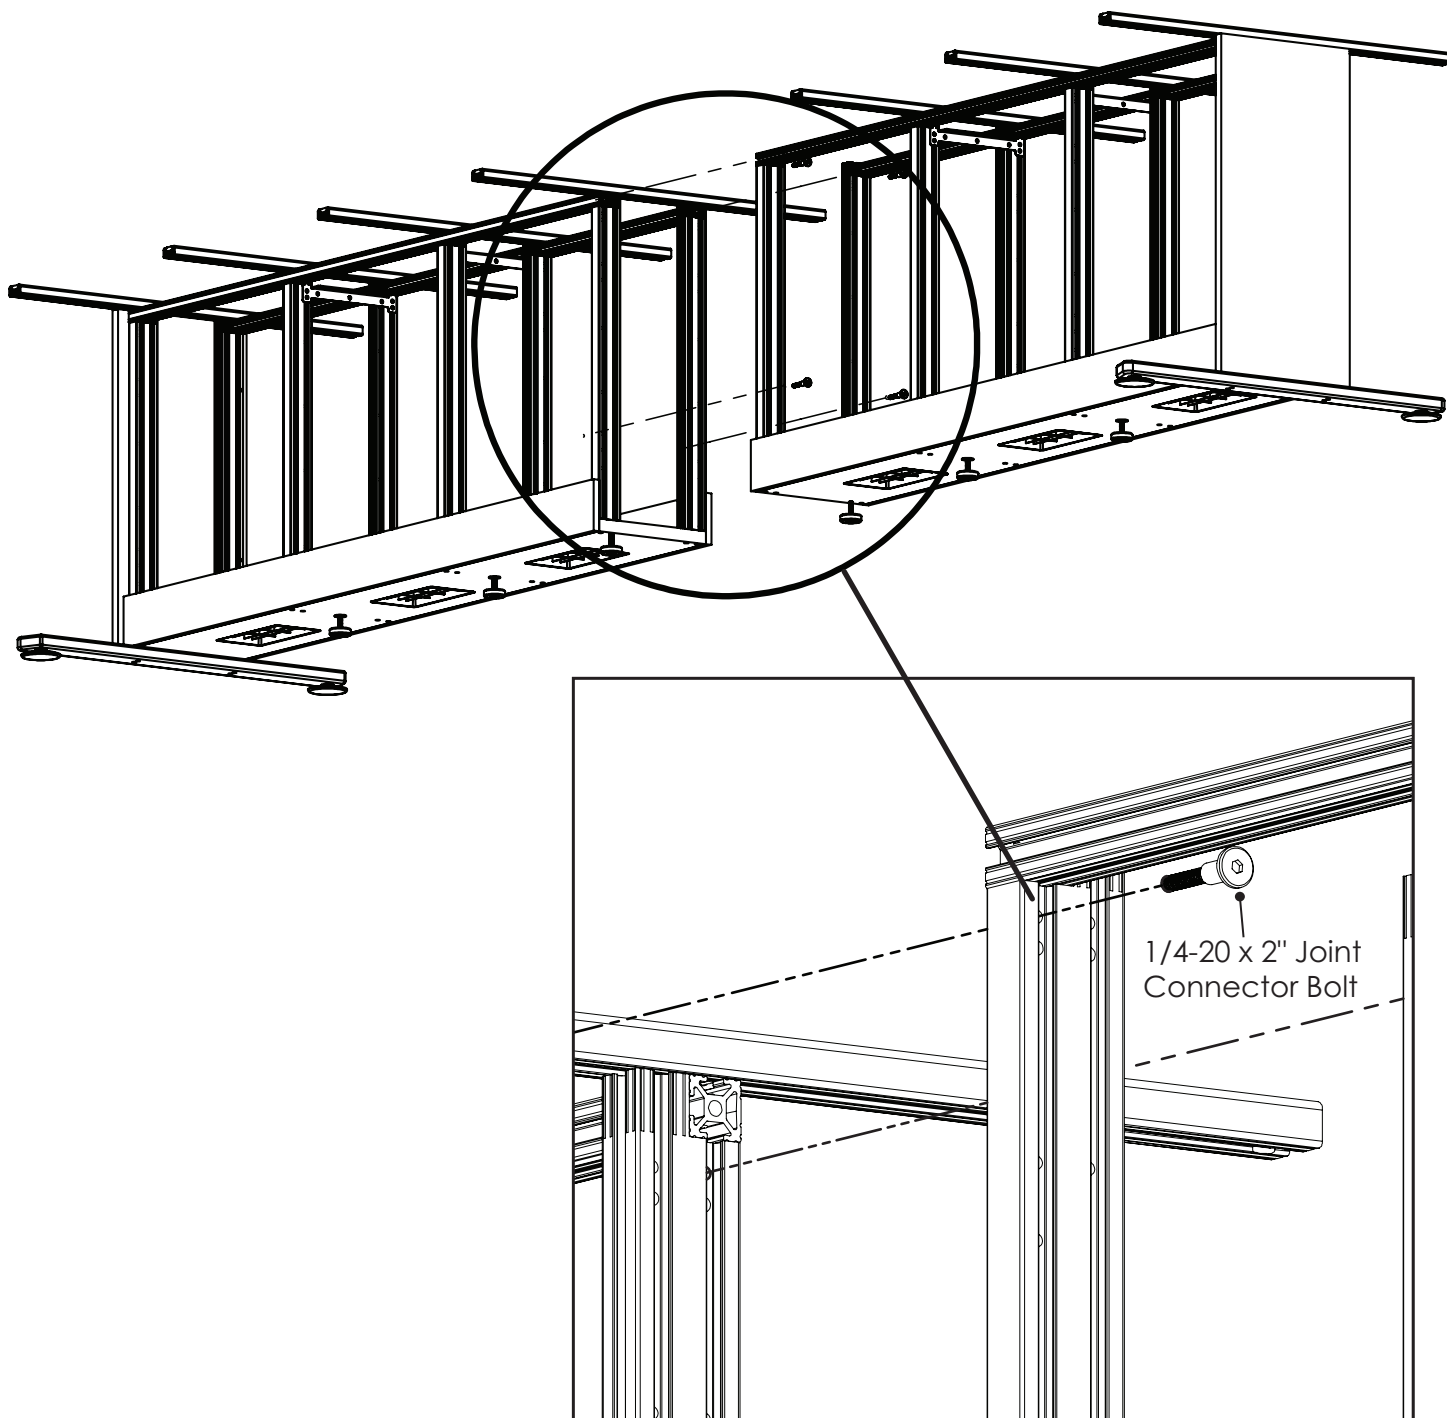


## 2. ASSEMBLE TOP (IF APPLICABLE)

- A. Assemble the Field Joint Kit using the wrench provided. The Threaded Block should be spaced approximately 3" away from the Unthreaded Block to be able to loosely fit in the table's Joint Pocket.

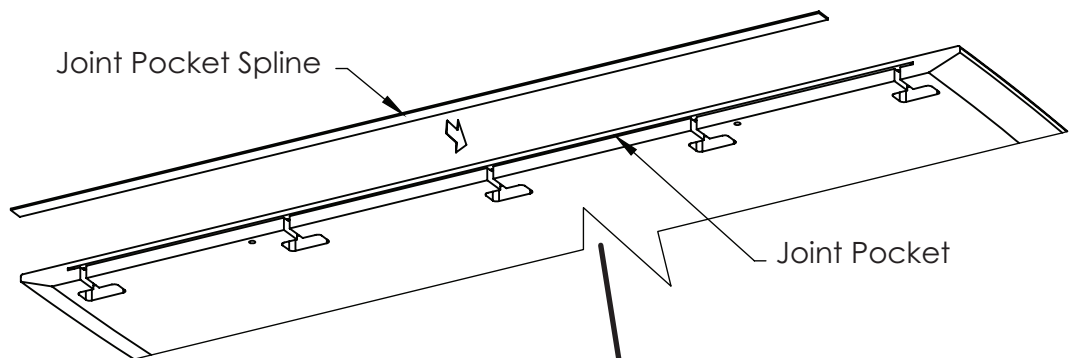
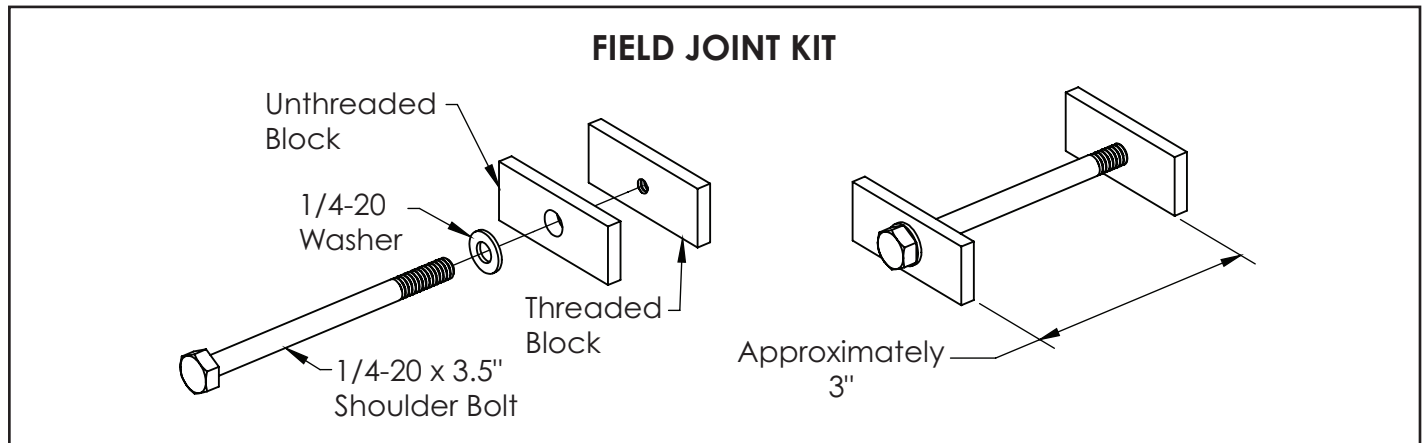


- B. Insert the Joint Pocket Spline into the Joint Pocket, as shown above.
- C. Place the two table segments on top of the base and push the two together while aligning the Joint Pockets.
- D. Install Joint Pocket Kits where access is available. The table top will have to be carefully moved to provide access to some of the Joint Pockets.

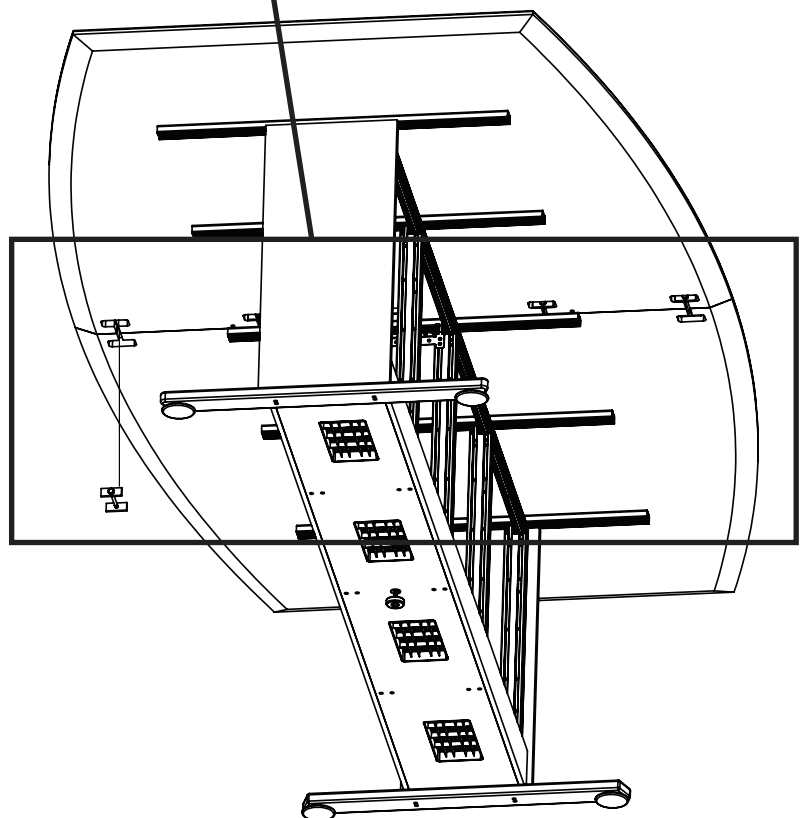

### 3. ATTACH TABLE TOP


Using the Hex Key provided, attach the table top to the pedestal base using the 1/4-20 x 1" Button Head Socket Cap Screws, as shown in figure 1 to complete the assembly.

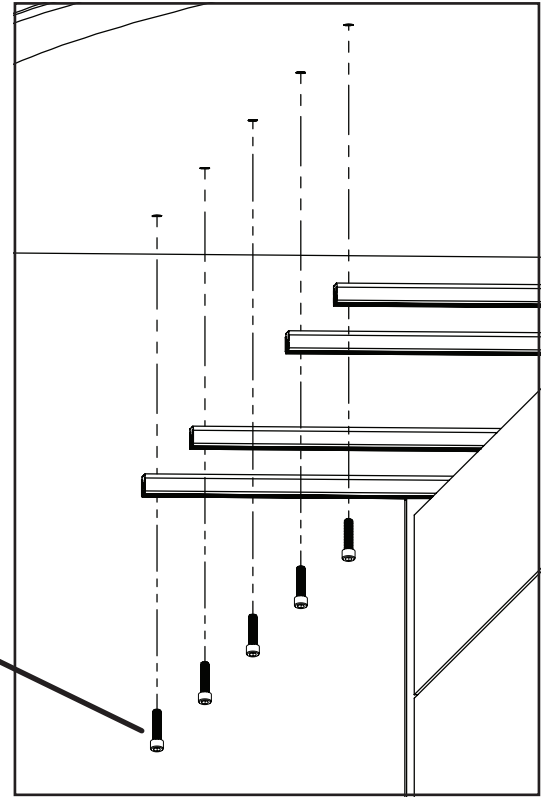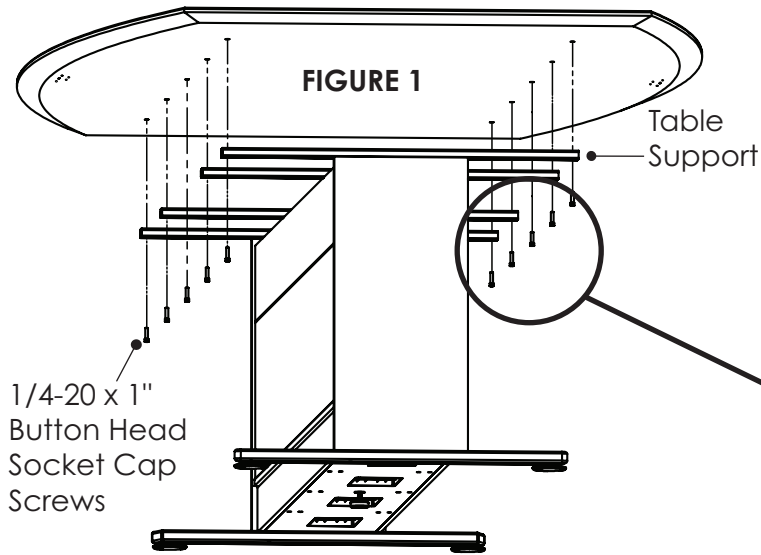

### 4. LIFT-OFF PANEL

Attach the Lift-Off Panel to the Pedestal Base by dropping the Lift-Off Brackets onto the Shoulder Bolts, as shown in figure 2.

Lift-Off Panel Bracket

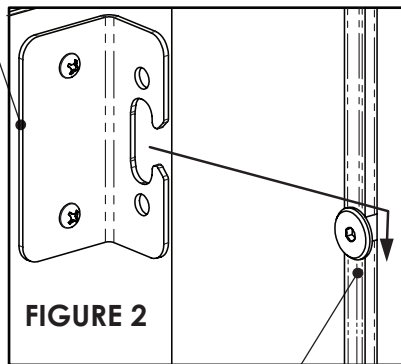

Lift-Off Panel

Lift-up and out


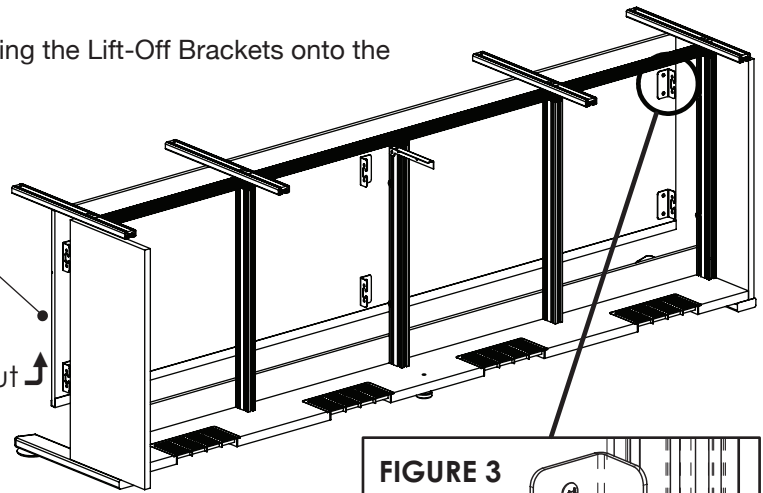


FIGURE 3

**NOTE:** If both panels are locked then the top must be removed to remove a panel.

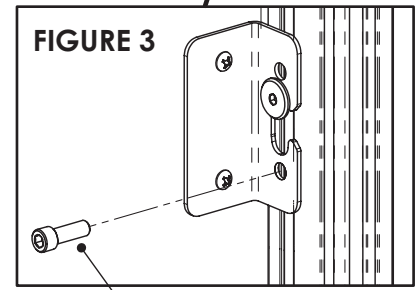

### 5. LEVEL TABLE

Adjust levelers as needed.