


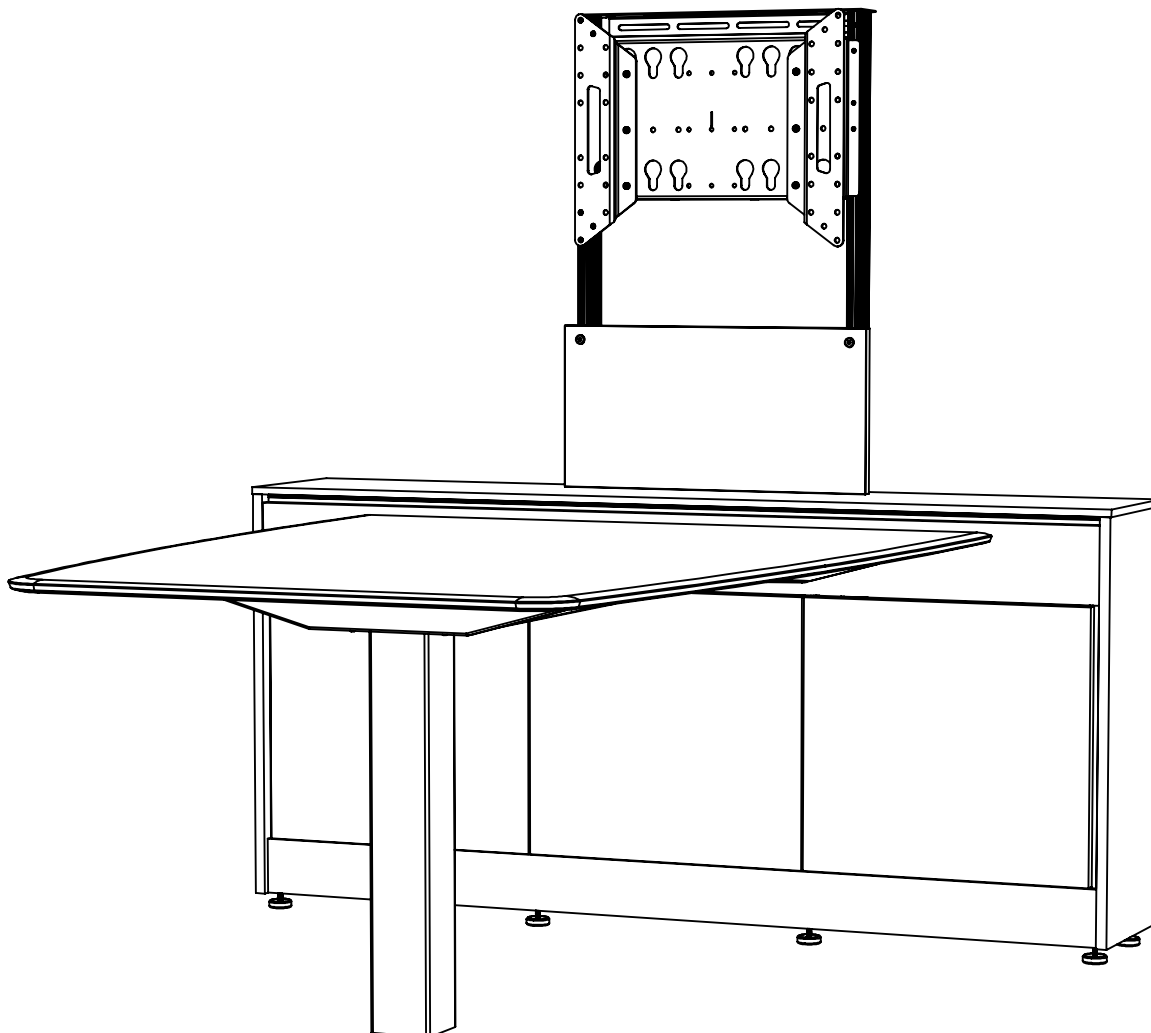

D1/338AM1 ASSEMBLY INSTRUCTIONS

UNIFI HUDDLE – SINGLE MOUNT



TIP HAZARD WARNING!

Cabinet must be affixed to wall.

For use with video monitors weighing **175lbs (80kg)** or less. Use with heavier televisions may result in instability causing tip over resulting in death or serious injury.

WARNINGS

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THIS FURNISHING



WARNING! – Failure to comply with these instructions may result in accident involving serious personal injury. Failing to follow these instructions can result in the product being damaged or being destroyed or voiding of the warranty.



WARNING! – For use with video monitors weighing 175lbs (80kg) or less. Use with heavier televisions may result in instability causing tip over resulting in death or serious injury.

CAUTION!

- Close supervision is necessary when this furnishing is used by or near children, invalids, or disabled persons
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Do not use outdoors
- For Commercial Use Only

Weight Capacities – Max Load: 175 lbs (80kg)


***** **SAVE THESE INSTRUCTIONS** *****

Accessories and Spare Parts

Please contact Salamander Designs 860.761.9500 or www.salamanderdesigns.com

PARTS


ID	PART NUMBER	DESCRIPTION
A	300-518	1/4-20 x 3/8" Button Head Socket Cap Screw
B	300-486	1/4-20 x 1.25" Button Head Socket Cap Screw
C	300-365	Leveler 3/8-16 x 1.5"
D	301-745	Hollow Wall Anchors
E	301-055	3/8" 2" Alligator Wall Anchors
F	300-465	1/4-20 x 3/4" Socket Cap Screws
G	300-835	Universal Shelf Peg
H	300-565	Drop In Nut
J	301-730	5/16 x 2.5" Lag Bolt
K	300-468	1/4" Flat Washer
L	CA/BS	Brush Seal Set w/Adhesive
M	301-265	1/4-20 Joint Connector Bolt
N	400-035	Leveler Wrench
O	300-485	1/4-20 x 1/2" Button Head Socket Cap Screw
P	300-542	Joint Connector Bolt, 5/16-18 x 1.5"
Q	203-740	Shelf, Single Camera Mount
R	301-845	1.5 x .75" Extrusion
S	300-505	3/4" Set Screw
T	300-520	1-4-20 Flat Nut

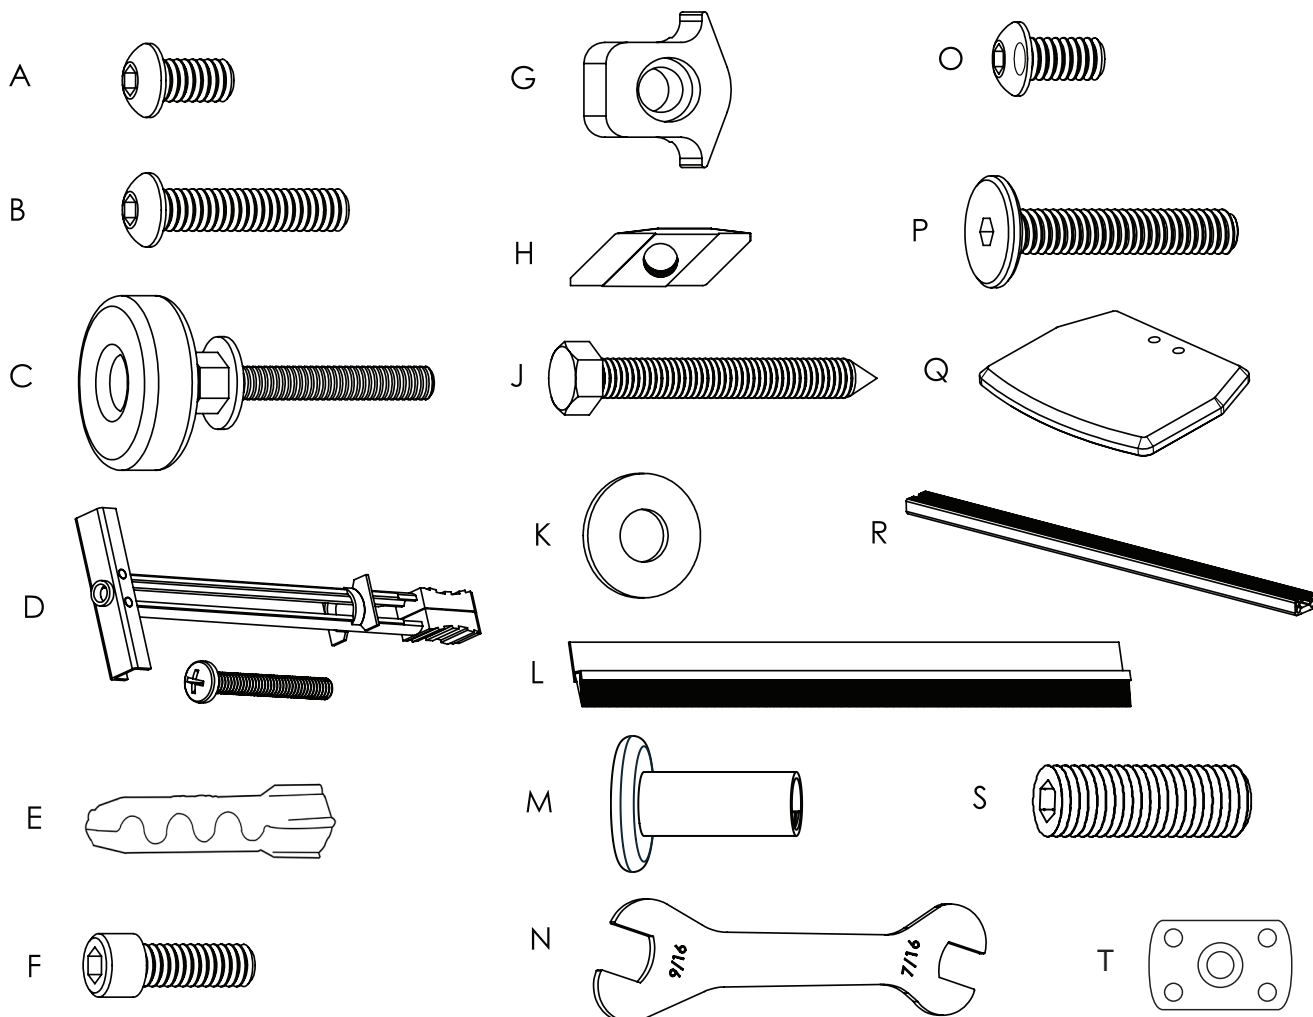

1. ATTACH LEG TO TABLE


A. Attach leveler (**C**) to leg as shown.
Hand tighten loosely.

B. Attach desk leg to table support
using four A screws.

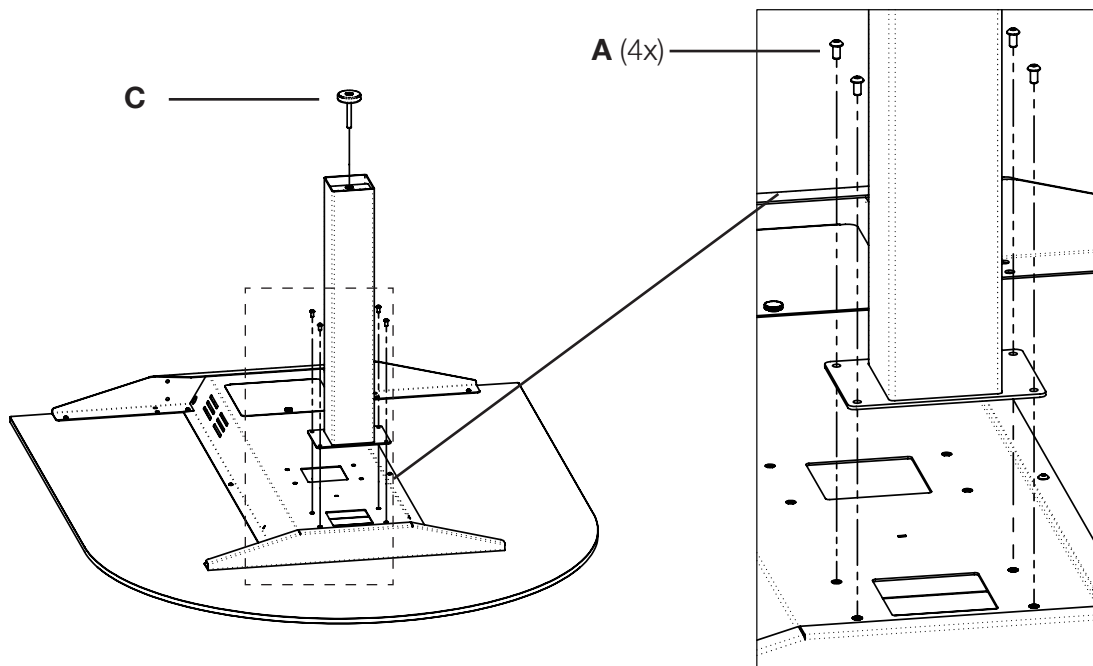


2. ATTACH TABLE TO CABINET

Attach table to cabinet using four B screws.

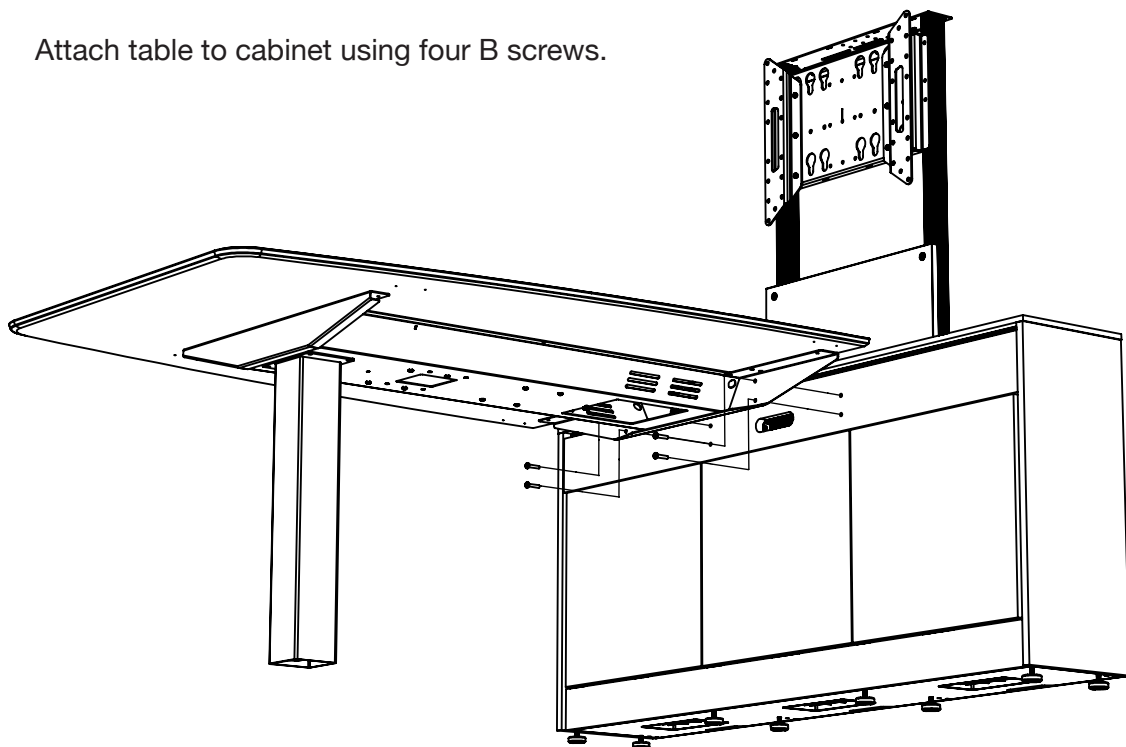

3. INSTALL DISPLAY BRACKETS

Fasten the brackets using fasteners (length and size recommended by the display manufacturer).

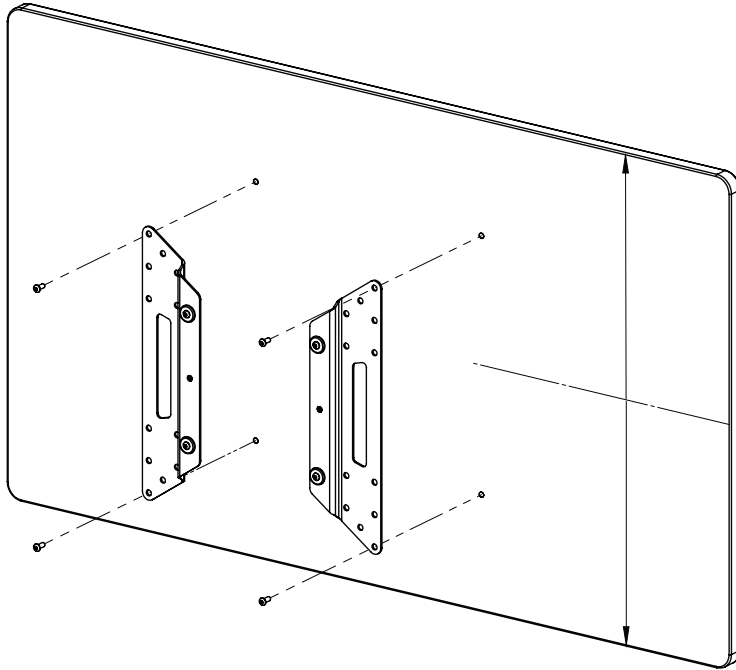


To prepare for Tech Shelf height:

- A. Measure from center hole in display bracket to either the top or bottom of the display to set tech shelf height.
- B. Add one half height of device plus clearance desired for bottom camera placement or clearance above display (Note: Tech Shelf may be afixed above or below display).

4. ATTACH TECH SHELF (OPTIONAL)

Attach tech shelf to display header using screws C and nuts D.

(Hardware included in tech shelf.)

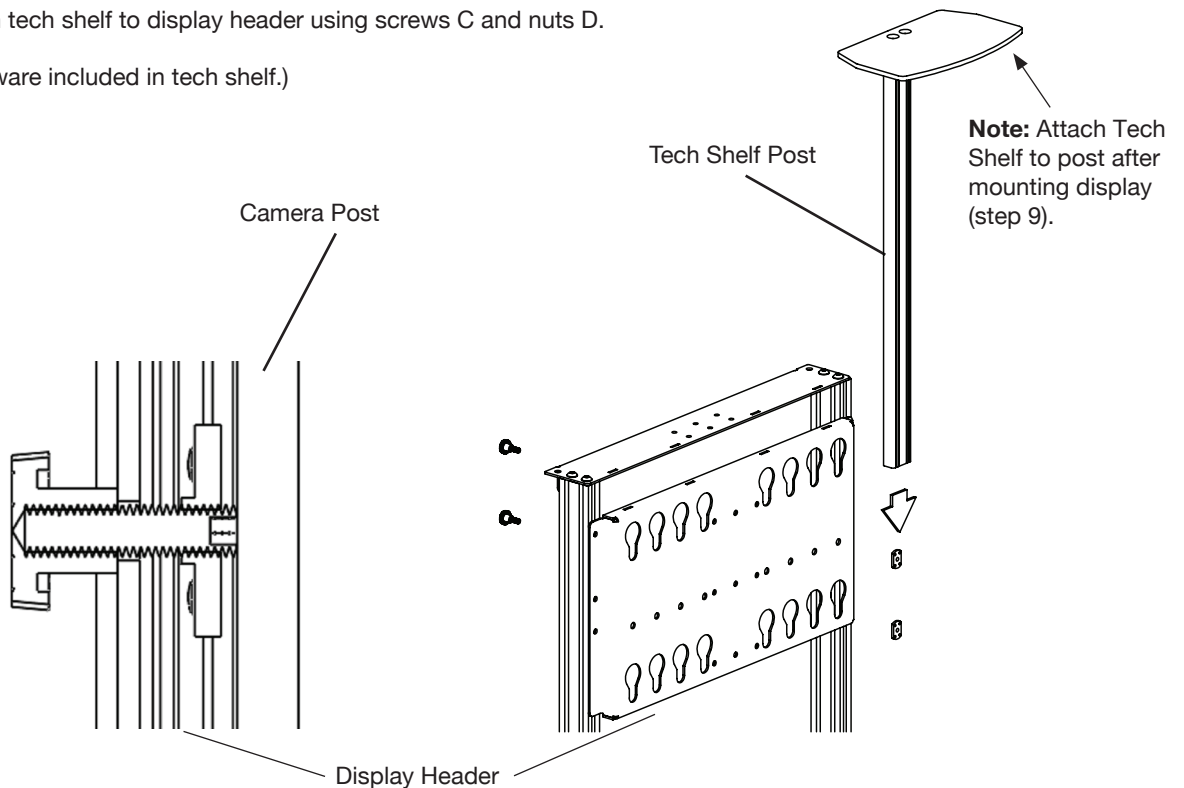




WARNING! This step requires two people.

5. LEVEL CABINET AND MARK WALL


- A.** Prior to fastening to wall, it is important to level the cabinet with the floor by verifying that feet are properly adjusted.

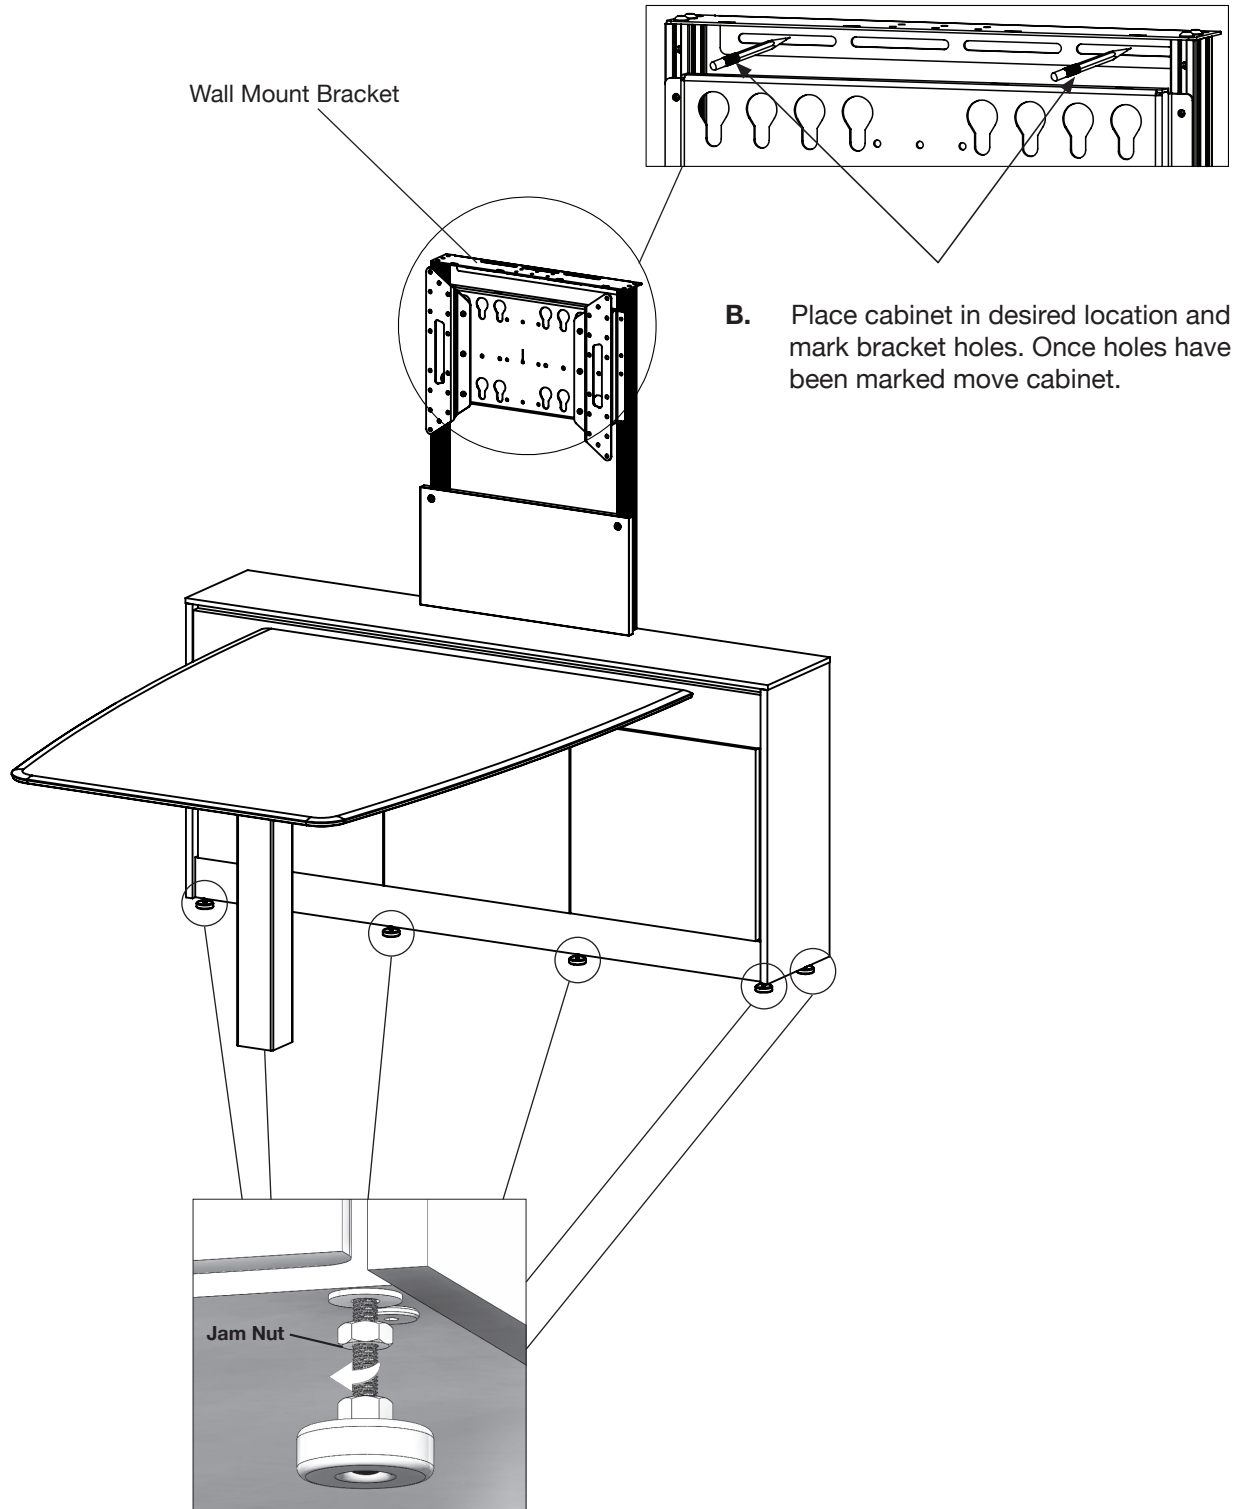


Loosen jam nut with supplied wrench and tighten to the locked position.

6A. INSTALL WALL FASTENERS (MOST APPLICATIONS)


Install wall fasteners to marked location on wall & fasten cabinet.

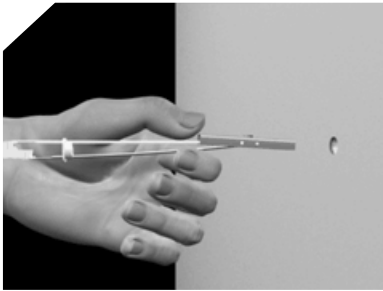


- A** Drill 1/2" diameter hole. Hold metal channel flat alongside plastic straps and slide channel through hole.

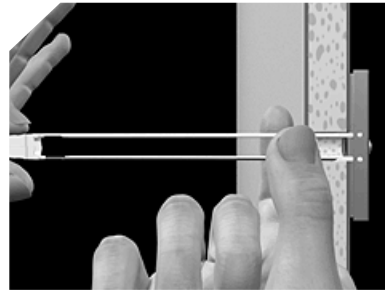

- B** Hold ends of straps between thumb and forefinger and pull toward you until channel rests flush behind wall. Slide plastic cap along straps with either hand with flange of cap is flush with wall.

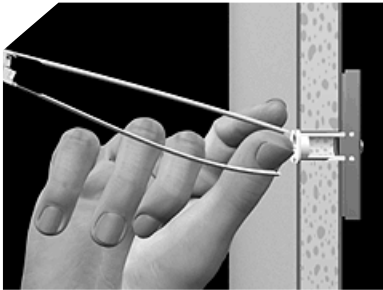

- C** Snap straps at wall by pushing side to side, snapping of straps level with flange of cap.

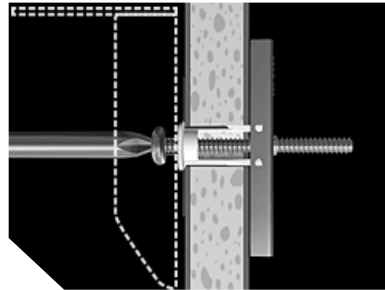


- D** Move cabinet to wall and attach bracket. Insert bolt through Bracket and tighten until snug against wall.

6B. INSTALL WALL FASTENERS (ALTERNATE)

- A** **WOOD:** Locate two framing studs using a stud finder device. 3/16" bit, use lag bolt (J) only. Drill to 2.5" (63mm) depth.

MASONRY: Place brackets in desired location. 3/8" bit, use lag bolt (J) and wall anchor (E).

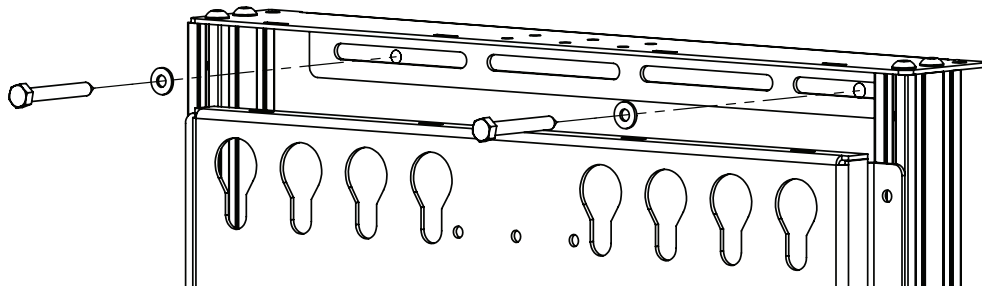


Place cabinet in place and fasten with washers K and lag bolts J.

7. INSTALL BRUSH SEAL



*Use with baseboard molding, trim work or gaps in uneven wall surfaces.
Brush Seal Holders should stay flush to surface so that ONLY brush is showing.*


Peel off tape backing and from the inside of the cabinet install to inside wall surface of end panel indicated (below center), orient the brush seal so that the “L” shaped surface faces toward the inside of the cabinet.

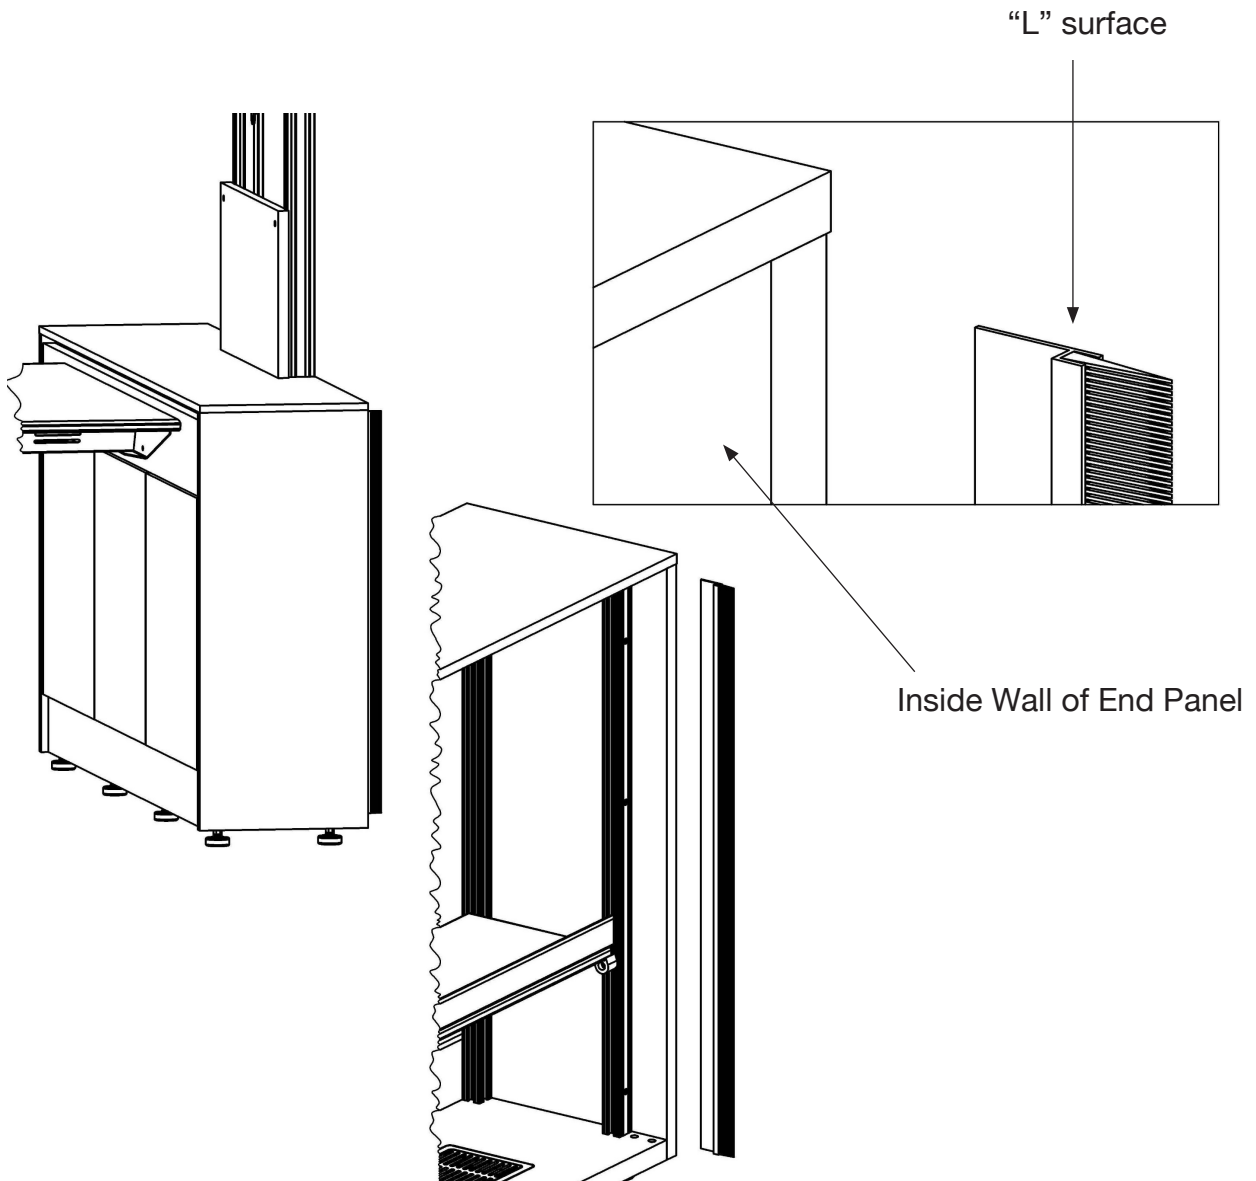

8. INSTALL SHELVES


NOTE: Shelf pegs can be re-positioned if desired.

- A.** Place shelves on pegs.
- B.** Install shelf stops in front or back of shelf as desired.
- C.** Shelf placement can be adjusted if necessary to either pre-drilled locations or any location using Drop-In Nuts (B) supplied.
- D.** Install accessories (IR Repeater Kit, Power Conditioner, etc) and place components.

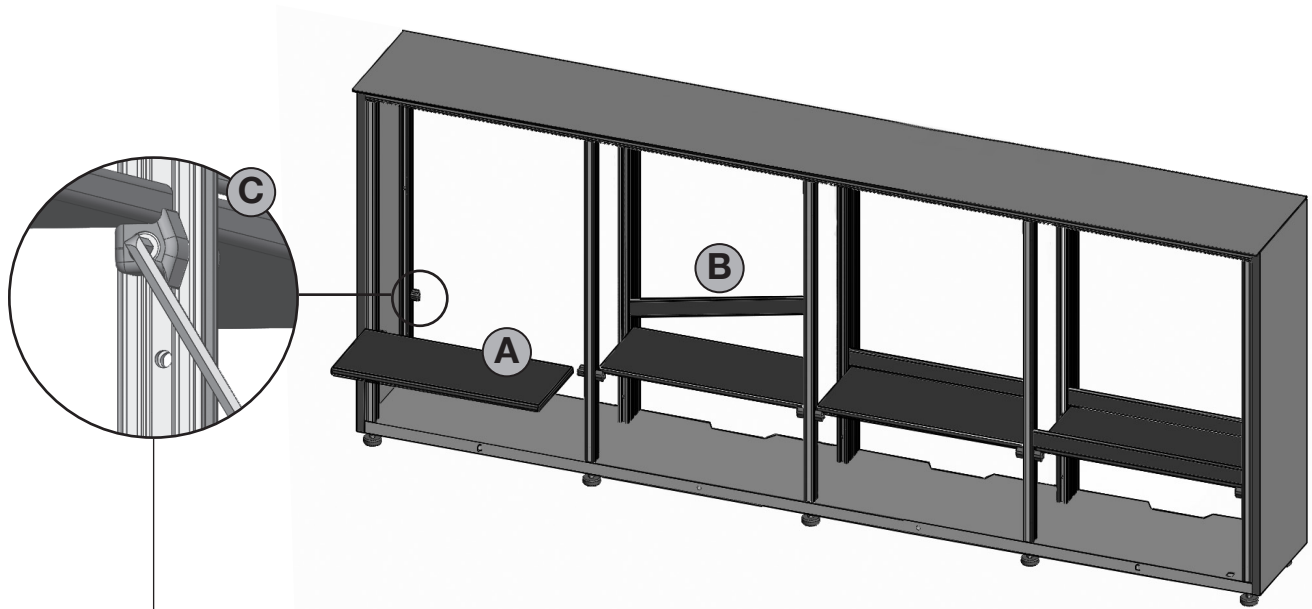


Drop-In Nut Option

Should you desire shelf placement in location other than predrilled locations, use the drop-in nut option. This option allows shelf to be placed at any height.

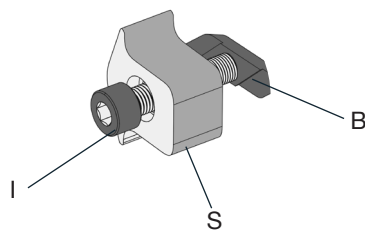


Assemble loosely as shown.

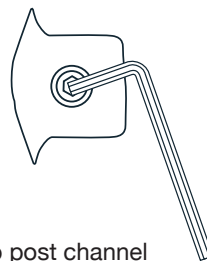

Insert into post channel and slide to desired height. Level shelf by adjusting shelf peg positions and tighten screw using hex key.

Note: Drop-in nut must make a 1/4 turn in post.

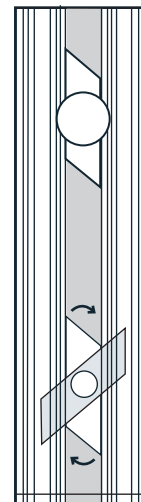




WARNING! This step requires two people.


9A. INSTALL DISPLAY TO MOUNT

Install display to header mount by inserting the four shoulder washers on the display brackets through the keyhole openings. Be sure that the shoulder washers rest at the bottom of the keyhole openings.

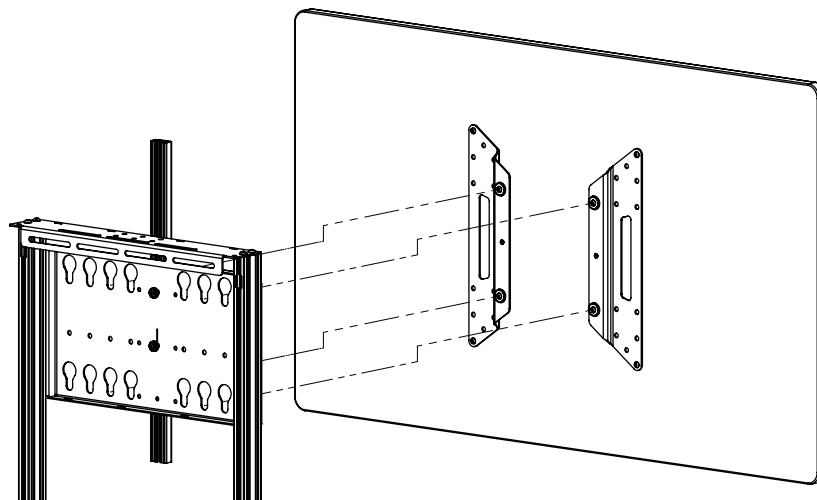

9B. INSTALL TECH SHELF TO MOUNT

Attach Tech Shelf (Q) to Shelf Post (R) using two (P) screws as shown.

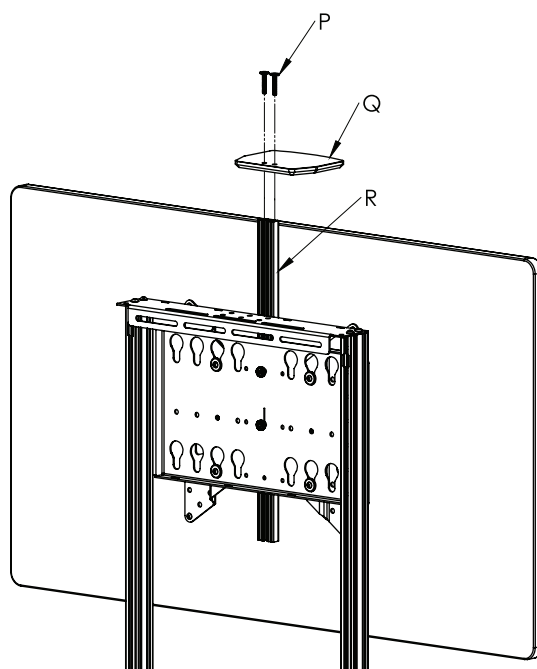


ADJUSTMENT TIPS

MODESTY PANEL


Removing and Re-Installing

NOTE: Be sure bottom of modesty panel is flush to cabinets top.

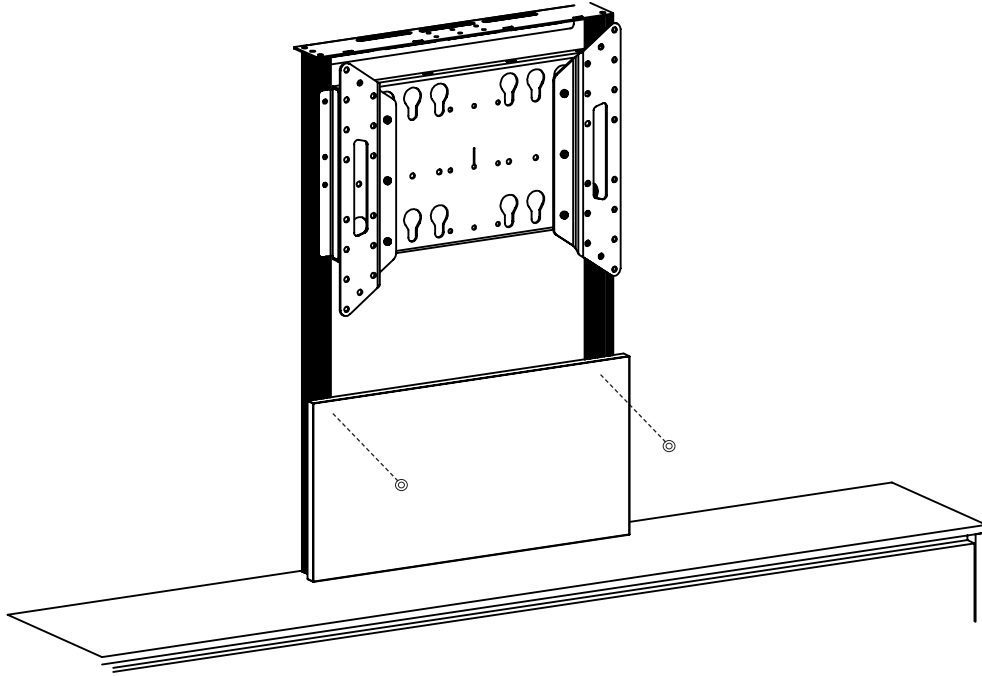


To remove or re-install the Modesty Panel, remove S bolt with the hex key supplied.

3U VERTICAL RACK (INCLUDED)

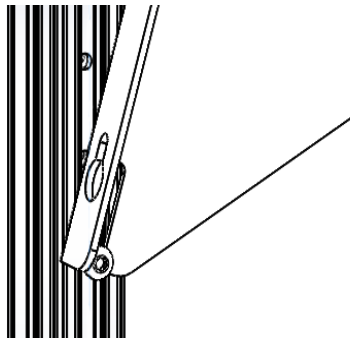

Remove


Loosen screws on both sides. Then tilt rack until the hook is free and lift up until the rack is free from bottom screw.

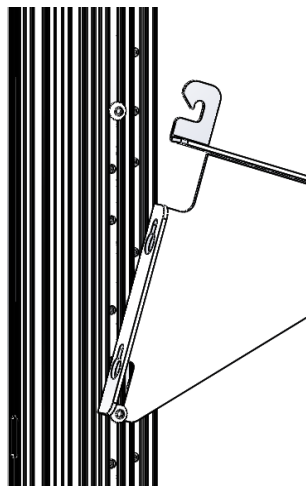

Re-Install

A

Slide the slotted ends of the rack over the bottom screw and hook the top screw as shown.

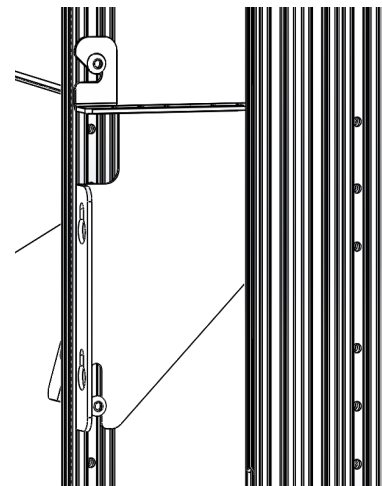

B


Tighten with provided Hex Key.

ADJUSTMENT TIPS



DOORS

NOTE: It is important that cabinet is level before adjusting doors.

A **Main Adjustment (Side to Side and Up/Down)**
Adjustment is made by turning screw (A) in and out.

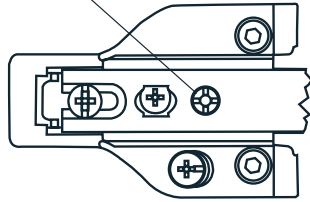

Adjust the tops of the doors to be parallel to the top of the cabinet.

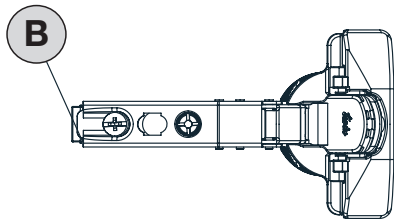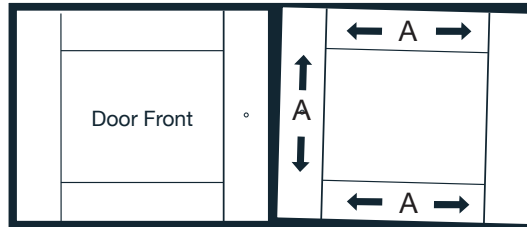

Dismount Hinge from Hinge Plate
With one hand holding the door open, pull back on the hinge quick-release lever (B).



SALAMANDER
DESIGNS

LIMITED WARRANTY FOR COMMERCIAL VIDEO DISPLAY STANDS, MOUNTS AND HUDDLE

Salamander is proud to stand behind our products with industry-leading warranties. Should you ever encounter any problem with your Salamander product, let us know. We are here to make it right. 1.860.761.9500

Full warranty including limitations and warranty claim information may be found at www.salamandercommercial.com/warranty

