




X-LARGE DUAL DISPLAY MOUNT

FOR 6 & 8 BAY CABINETS

Vesa Patterns

Horizontal: 400, 500, 600, 700, 800, 900, 1000, 1100, 1200

Vertical: 100, 200, 300, 400, 500, 600

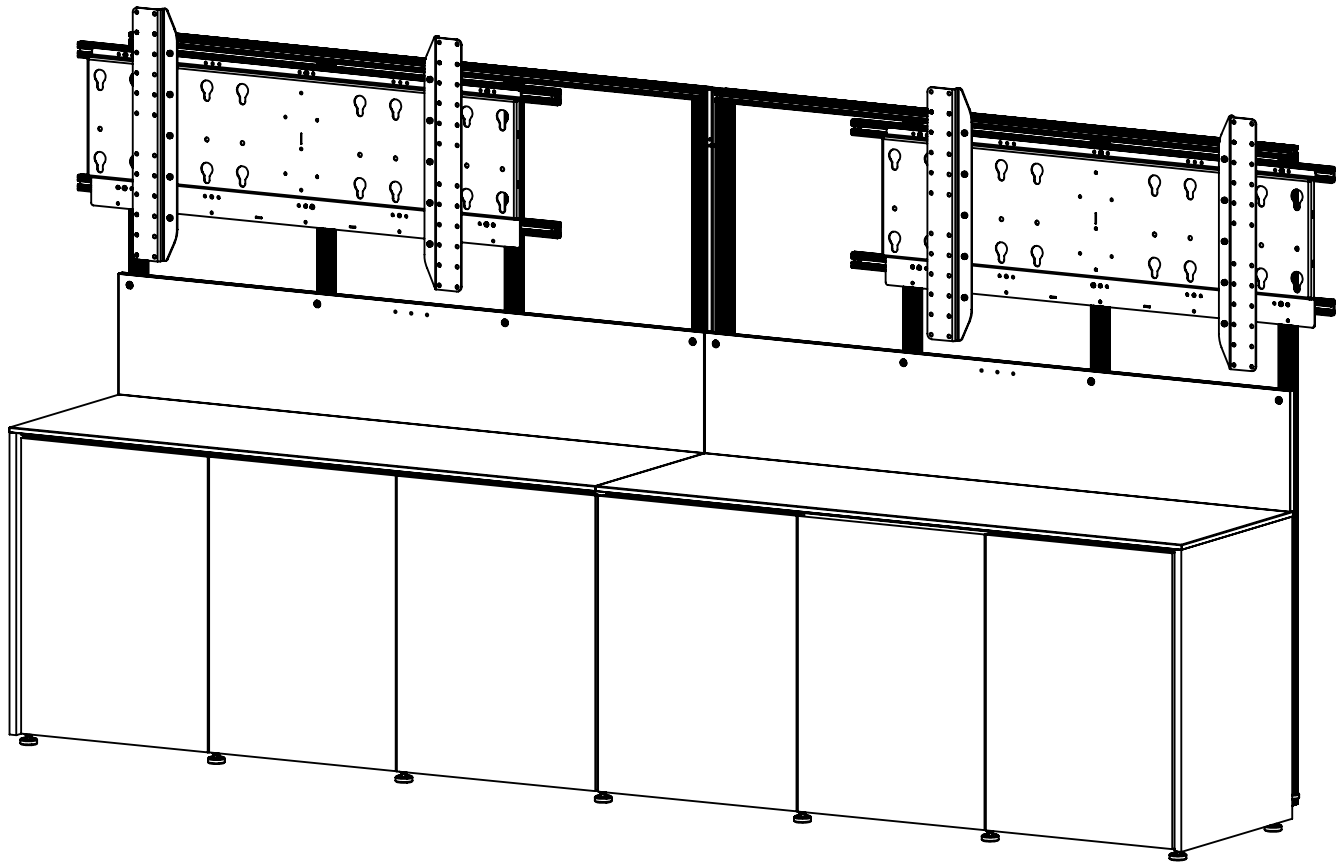


X-LARGE DUAL DISPLAY MOUNT HEIGHT/WEIGHT CAPACITY

		56" - Low	63" - H1	69" - H2	74" - H3	79" - H4	Wall Secured
Center of Vesa Range (A)		47" - 53"	54" - 60"	59" - 65"	64" - 70"	69" - 75"	All
6-Bay	M2XL	2x150lbs	2x150lbs	2x150lbs	2x150lbs	2x150lbs	2x200lbs
8-Bay	M2XL	2x150lbs	2x150lbs	2x150lbs	2x150lbs	2x150lbs	2x200lbs

1. Install Display Interface Brackets

Fasten the display interface brackets using fasteners (length and size recommended by the display manufacturer).

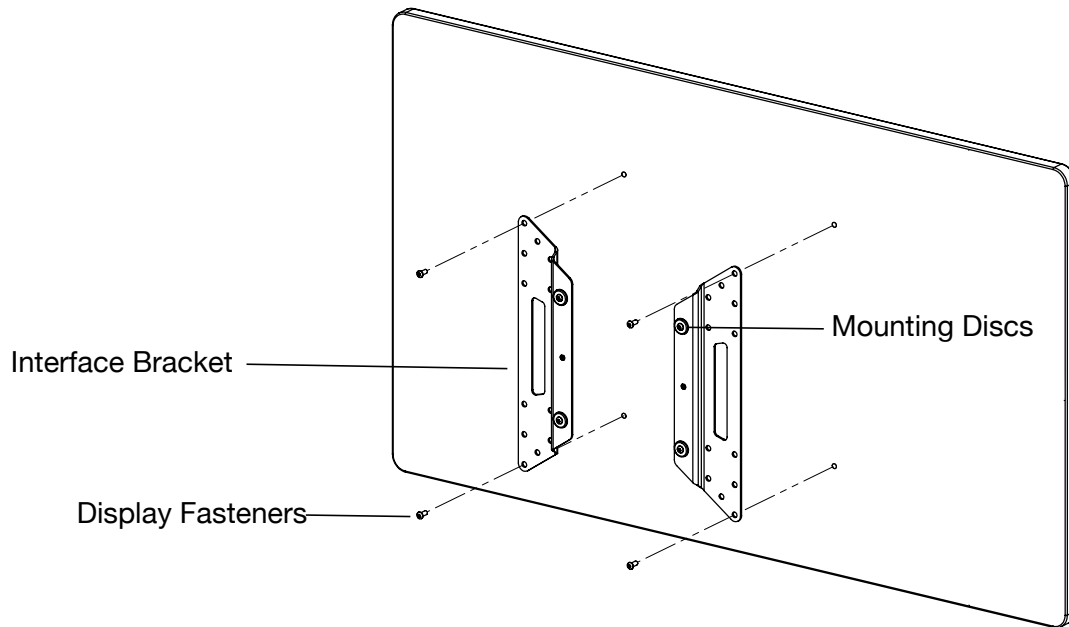




TIP: It's best to review Step 2 and 3 before getting started. Width and height adjustments do share some positioning considerations for the horizontal extrusions as well as tightening of mounts in position after Height and Horizontal positioning is complete.

2a. Adjust Screen Center Height


Remove Mount Headers removing the screws (in dashed circles pictured) and loosening (do not remove) the screws and set screws (in dashed rectangles pictured) and slide the two Mount Headers off of the Horizontal Mount Extrusions.

Remove and reattach the top Horizontal Mount Extrusion (through bolted) at the desired height. Loosen and slide the bottom horizontal mount extrusion down (bolted to front t-slot). Then measure 11.42 inches between the bottom of the top Horizontal Mount Extrusion and the top of the bottom Horizontal Mount Extrusion and tighten the bottom Horizontal Mount Extrusions. Reattach the Mount headers.

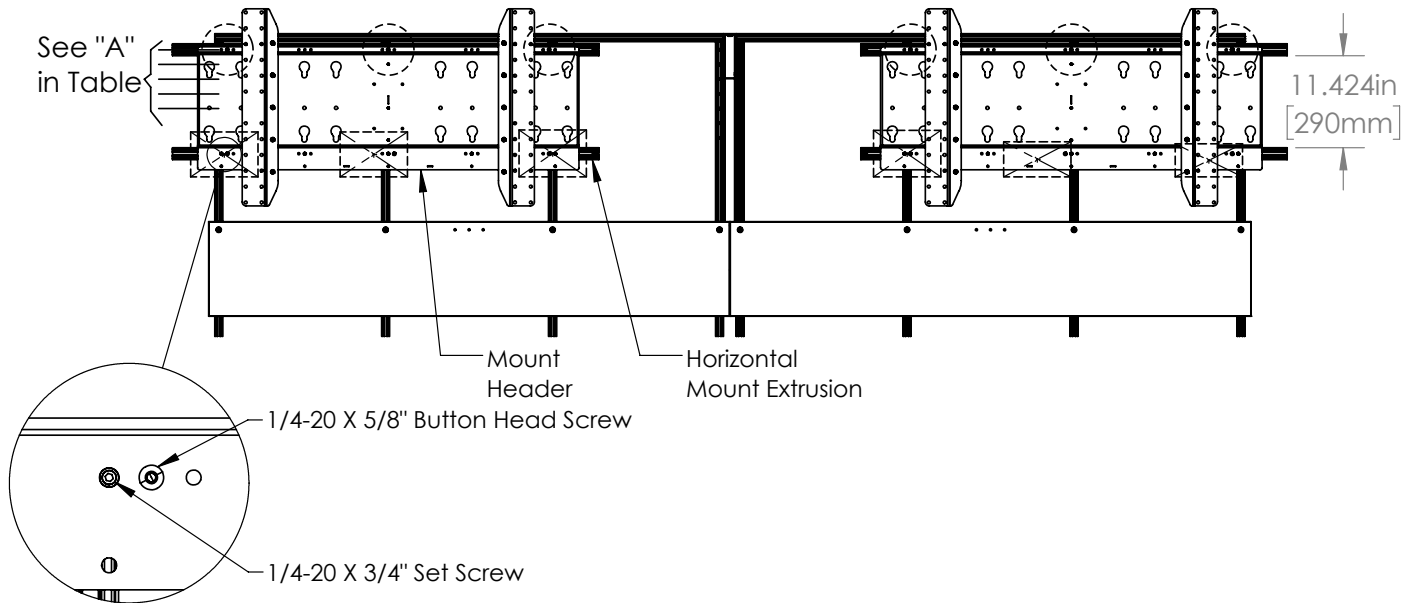

2b. Adjust Tilt

If necessary, adjust tilt on header by loosening the Button Head Screw and adjusting the Set Screw in all locations. Snug the Button Head Screws but do not over tighten.

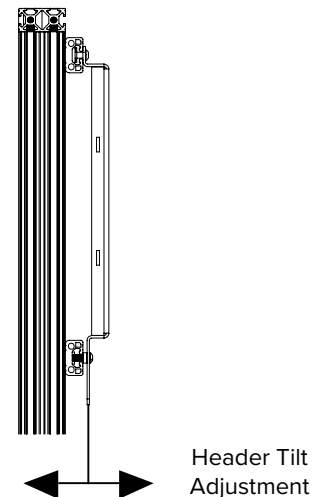

3. Adjust Horizontal Mount Locations


Set vertical screen center height before adjusting horizontal. Loosen fasteners (marked in dashed circles) to allow headers to slide (over loosening the fasteners will disconnect the flat nut held in Horizontal Mount Extrusion).

Use tape measure to slot in Mount Headers to determine horizontal mount locations. Set header locations using **Dimension B**, then double check **Dimension A**. Retighten fasteners when desired location is met.

Dimension A = 1 TV width + 1/8" for clearance between displays.

TV width + .125" (3.175mm) = A

Dimension B = A / 2 Measure from the center of the display mount bracket to the center of the cabinet

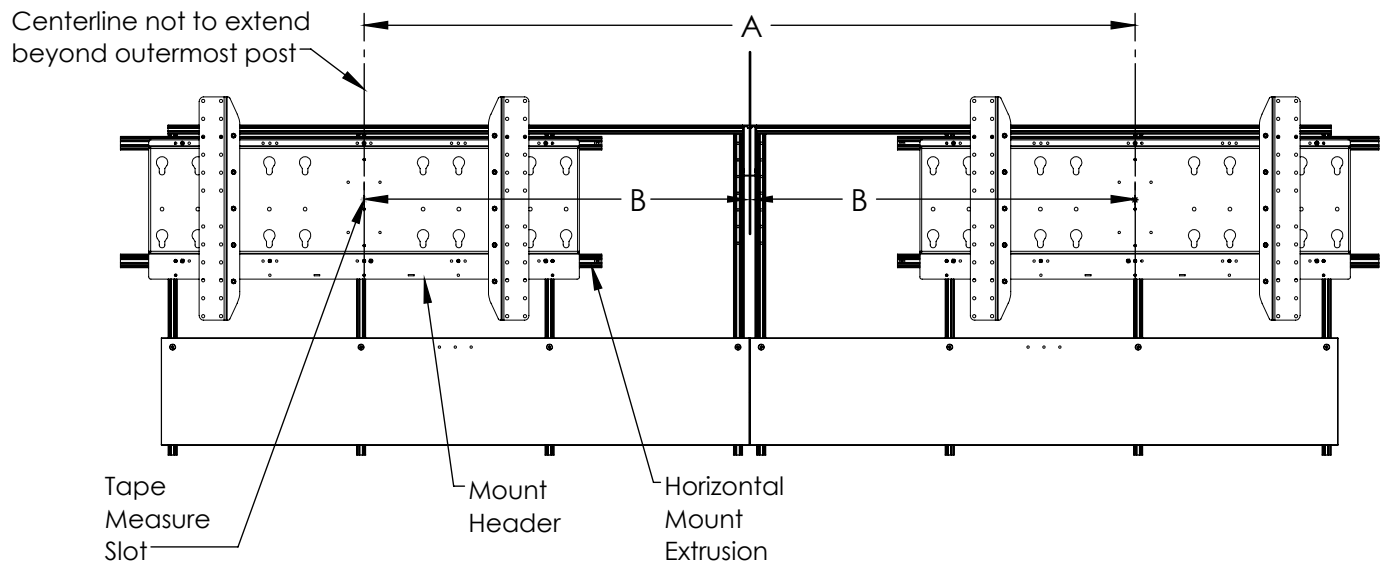


4. Attach Tech Shelf Or Speaker Bracket (Optional)

Refer to Tech Shelf or Speaker Bracket Accessory Instructions to install.

5. Mount Display On Keyhole Header

Carefully align display interface brackets onto the keyhole header.

Be sure all Shoulder Washers are fully engaged.

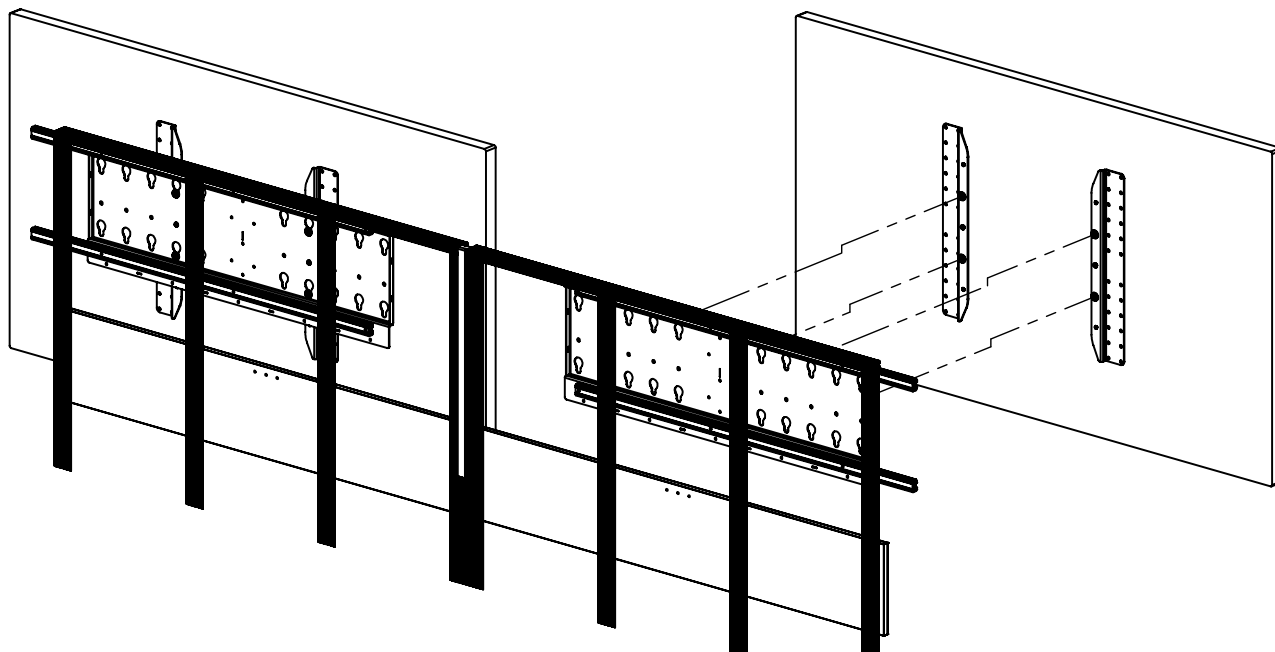

LIMITED WARRANTY FOR COMMERCIAL PRODUCTS

Salamander is proud to stand behind our products with industry-leading warranties. Should you ever encounter any problem with your Salamander product, let us know. We are here to make it right. 1.800.535.5659 - 860.761.9500

Full warranty including limitations and warranty claim information may be found at www.salamanderdesigns.com/commercial/warranty