


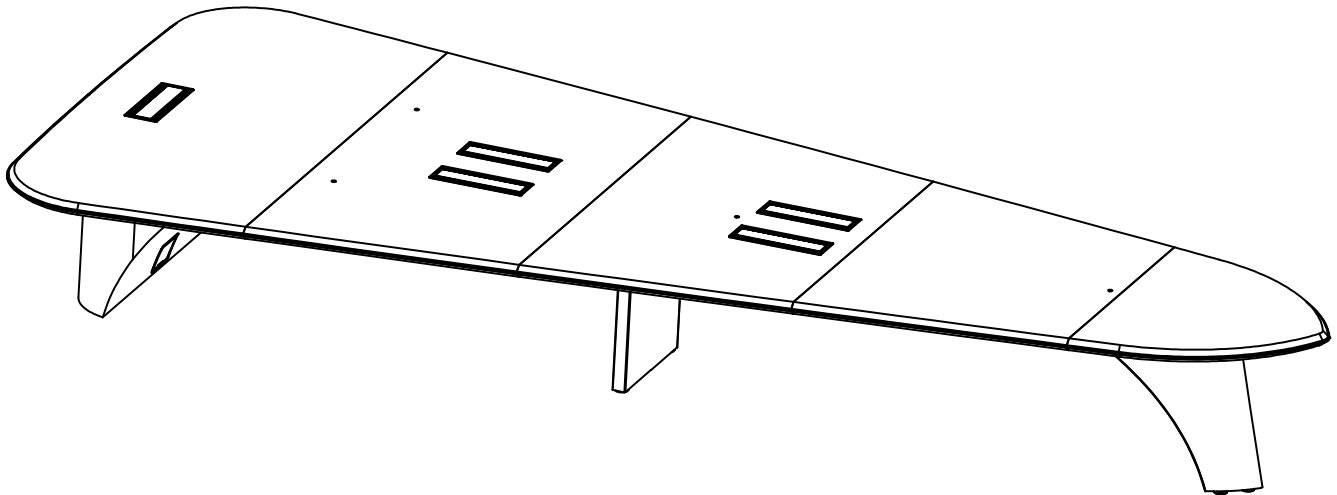


# Infiniti™ Meeting Table (12 Seater)

IC/12L/D (8'W X 18'L)



# PARTS

ID	QTY	PART NUMBER	DESCRIPTION
	(1)	TM2/T/818	Infiniti™ Meeting Table (12 Seater)
A	(1)	306-505	Table Base, Rear Pedestal
B	(1)	306-510	Table Base, Front Pedestal
C	(1)	305-549	Rectangular Table Leg
D	(4)	306-515	Table Support Bracket
E	(6)	P-303-335	Small L-Bracket
F	(2)	304-082/A	Stretcher
G	(2)	304-067/A	Short Stretcher
H	(12)	300-720	Double Flat Nut, 1/4-20
J	(12)	300-475	1/4-20 X 3/8 Socket Set Screw
K	(7)	300-365	Leveler
L	(13)	203-740/ICWM	Infinity Table Wire Manager
M	(20)	303-570	Table Domino
N	(14)	303-827	Table Connector
O	(31)	300-575	1/4-20 X 5/8" Button Head Screw
P	(56)	300-485	1/4-20 X 1/2" Button Head Socket Cap Screw
Q	(44)	300-560	1/4-20 Flat Nut
R	(20)	400-125	Velcro One-Wrap Strap 1/2" X 8" Long
S	(9)	300-515	1/4" Neoprene Bonded Washer
T	(2)	300-320	1/4" Leveler

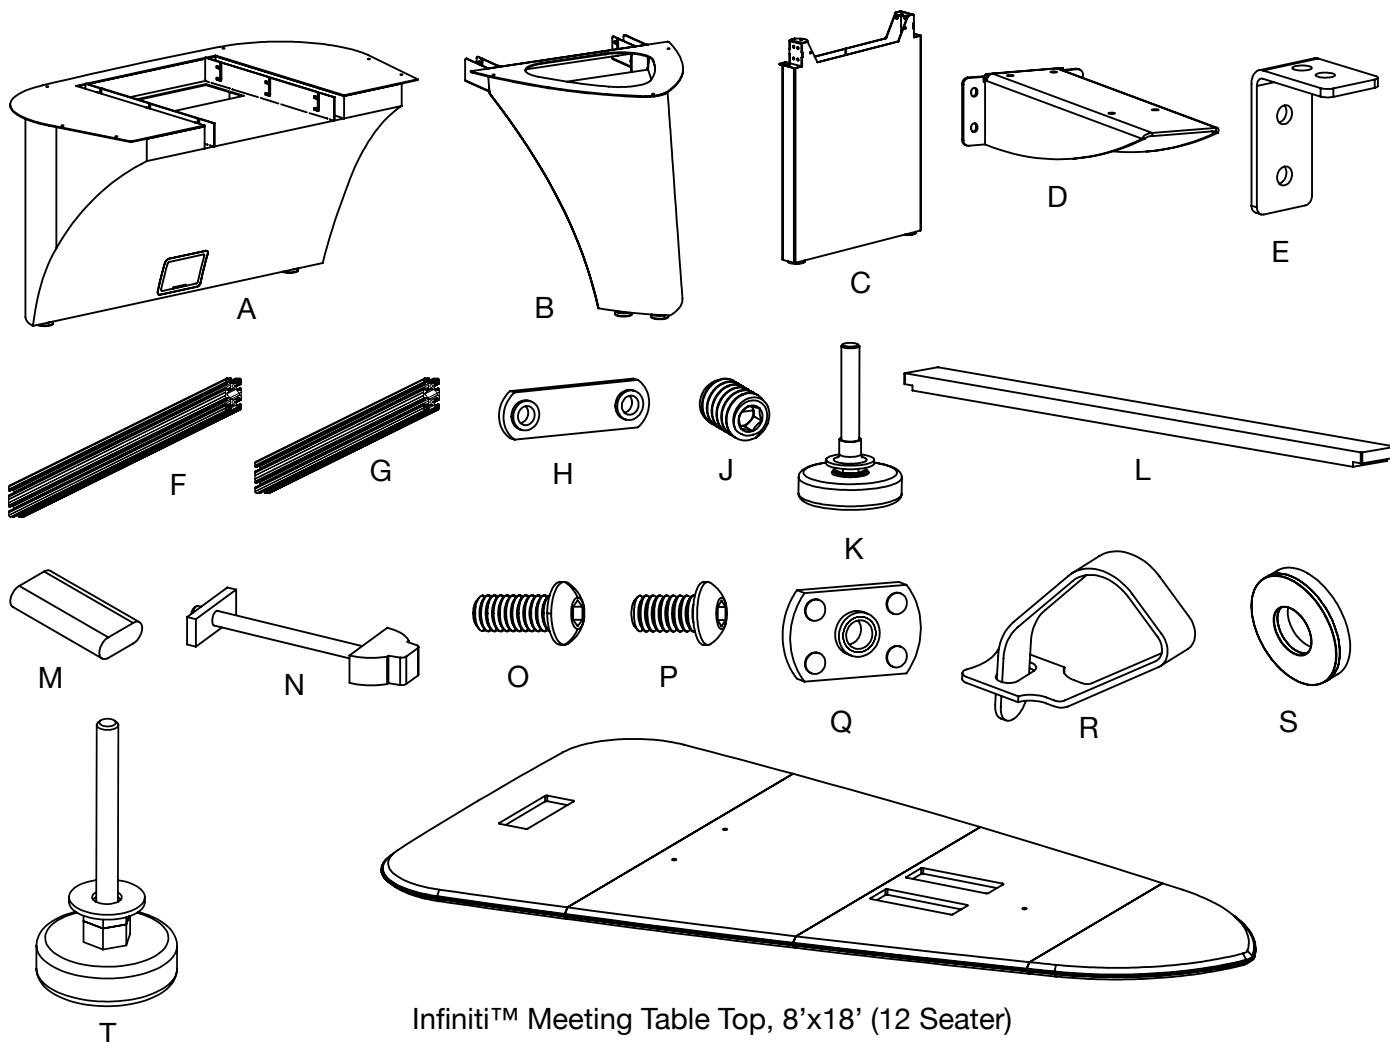

## 1. Setup Stretchers


**A.** Assemble Small Flat Nut and a 1/4-20 x 1/2" Button Head Screw into the longer leg of a Small L-Bracket. Do not tighten.

**B.** Slide the Small Flat Nut into the Upper T-Slot.

**C.** Place the Small L-Bracket approximately as shown.

**D.** Repeat on opposite Stretcher, mirrored.

Double Flat Nuts  
(preinstalled) at front,  
facing down)

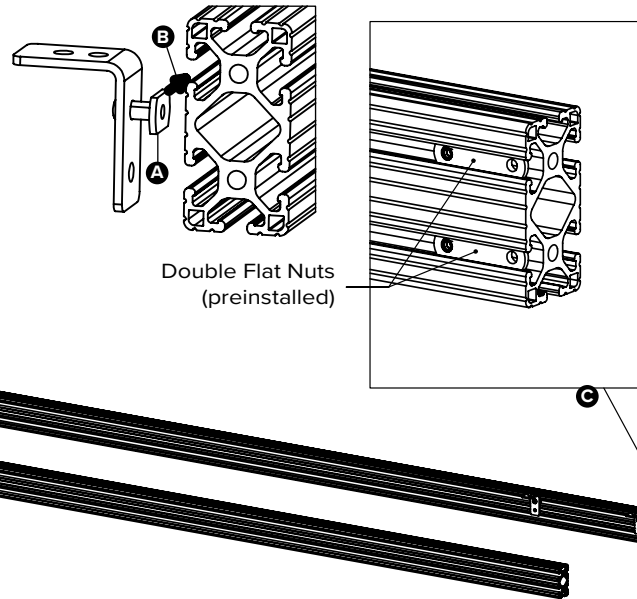

**NOTE:** This Assembly Requires Two People

## 2. Attach Stretchers to Front Pedestal

**A.** Place the Front and Rear Pedestals roughly 10' apart on a level floor then prop up the Front Pedestal.


**B.** Insert four sets of loosely attached 1/4-20 X 1/2" Button Head Screws and Small Flat Nuts into the two t-slots in the Stretcher as shown.

**C.** Lower the Stretcher into the Stretcher Bracket with the four screws resting at the bottom of the two L-Slots.

**D.** Attach the Stretcher to the Stretcher Bracket using two 1/4-20 X 1/2" Button Head Screws.


**E.** Slide the four sets away from the Pedestal into the L-Slots and tighten.

**F.** Repeat this process on the opposite side, mirrored.

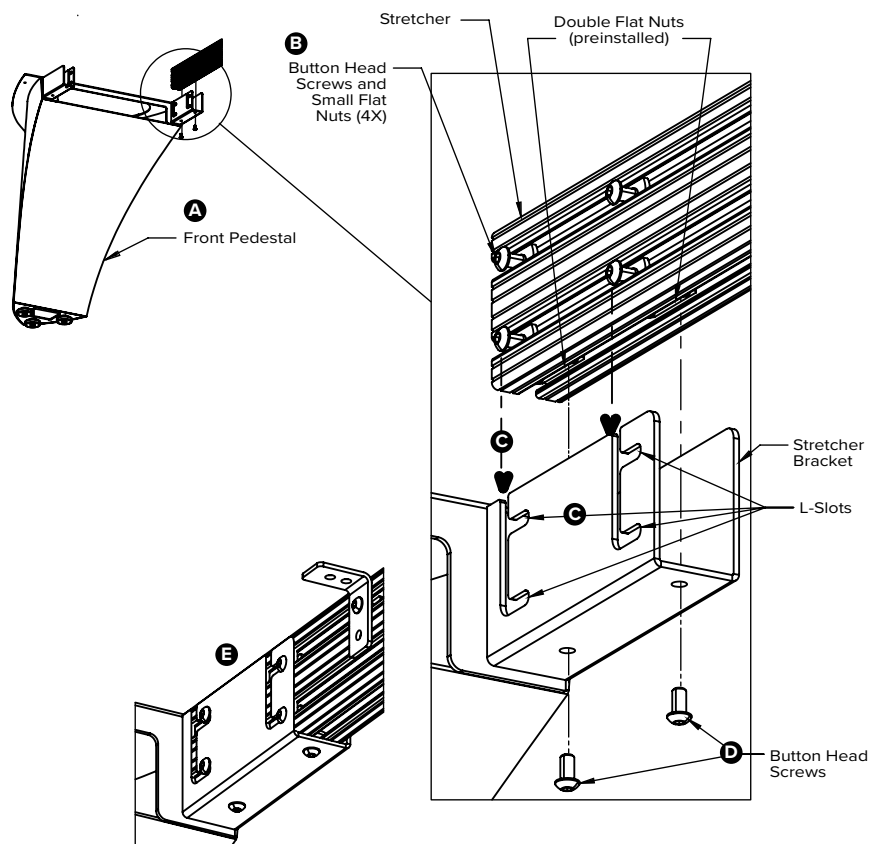

### 3. Attach Stretchers to Rear Pedestal


**A.** At the opposite side of the Stretchers, loosely install six 1/4-20 x 1/2" Button Head Screws and Small Flat Nuts in the upper and lower T-Slots as shown. Do not tighten.

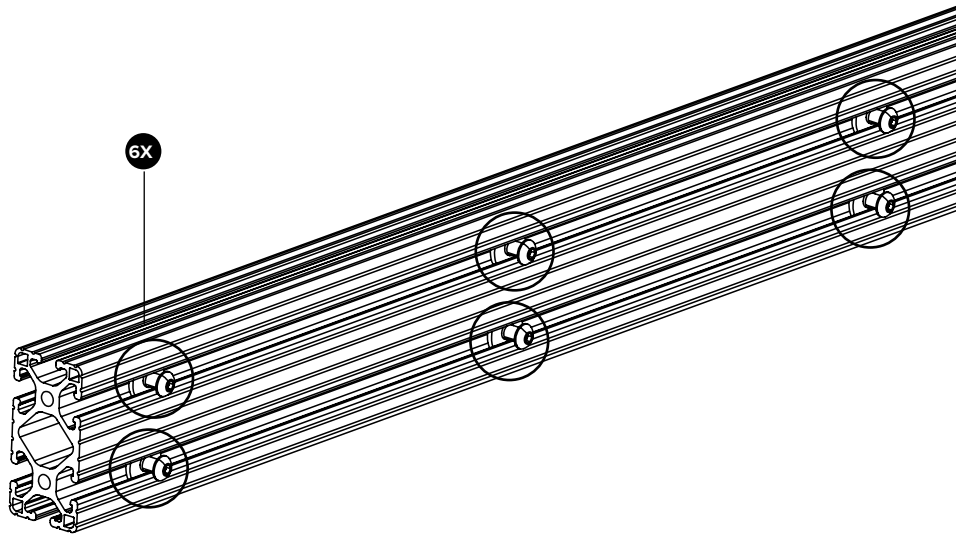

**B.** Lining up the 1/4-20 x 1/2" Button Head Screws with the L-Slots in the Rear Pedestal, Lower the Stretcher into the Rear Pedestal Stretcher Pocket.


**C.** Slide the six bolts into the "L" slots toward the rear of the pedestal. Snug, but do not tighten the 2 rear screws. Leave the remaining screws loose

**D.** Repeat on opposite side.

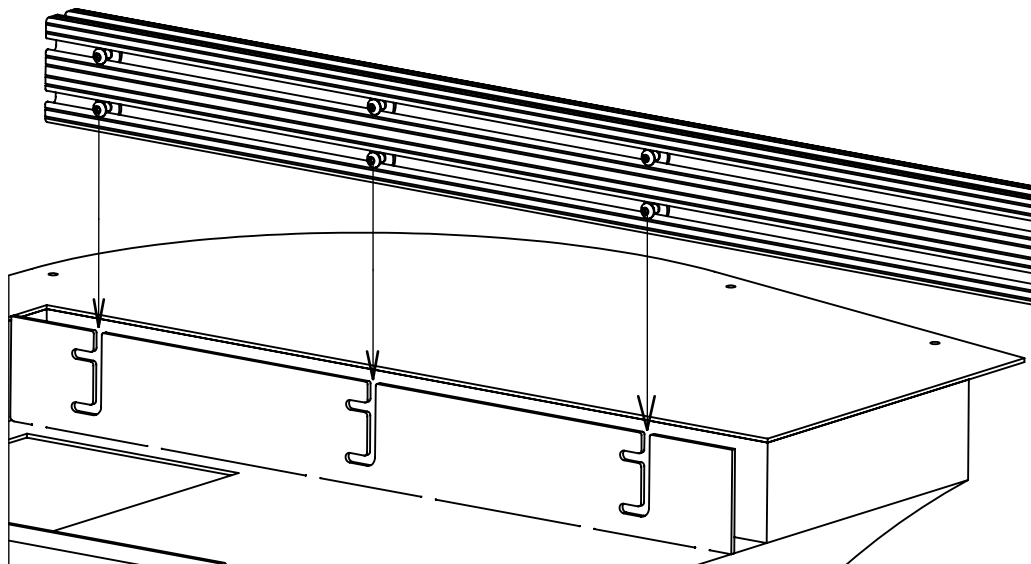


## 4. Attach Rear Stretchers to Mid Leg

- A. Insert a Small Flat Nut into the bottom of each Stretcher slot.
- B. Connect 1/4-20 x 1/2" Button Heads through the Mid Leg tabs and into the Small Flat Nuts. Do not tighten.
- C. Screw two (per side) 1/4-20 x 1/2" Button Head Screws through the Mid Leg Brackets and into the Double-Flat Nuts.

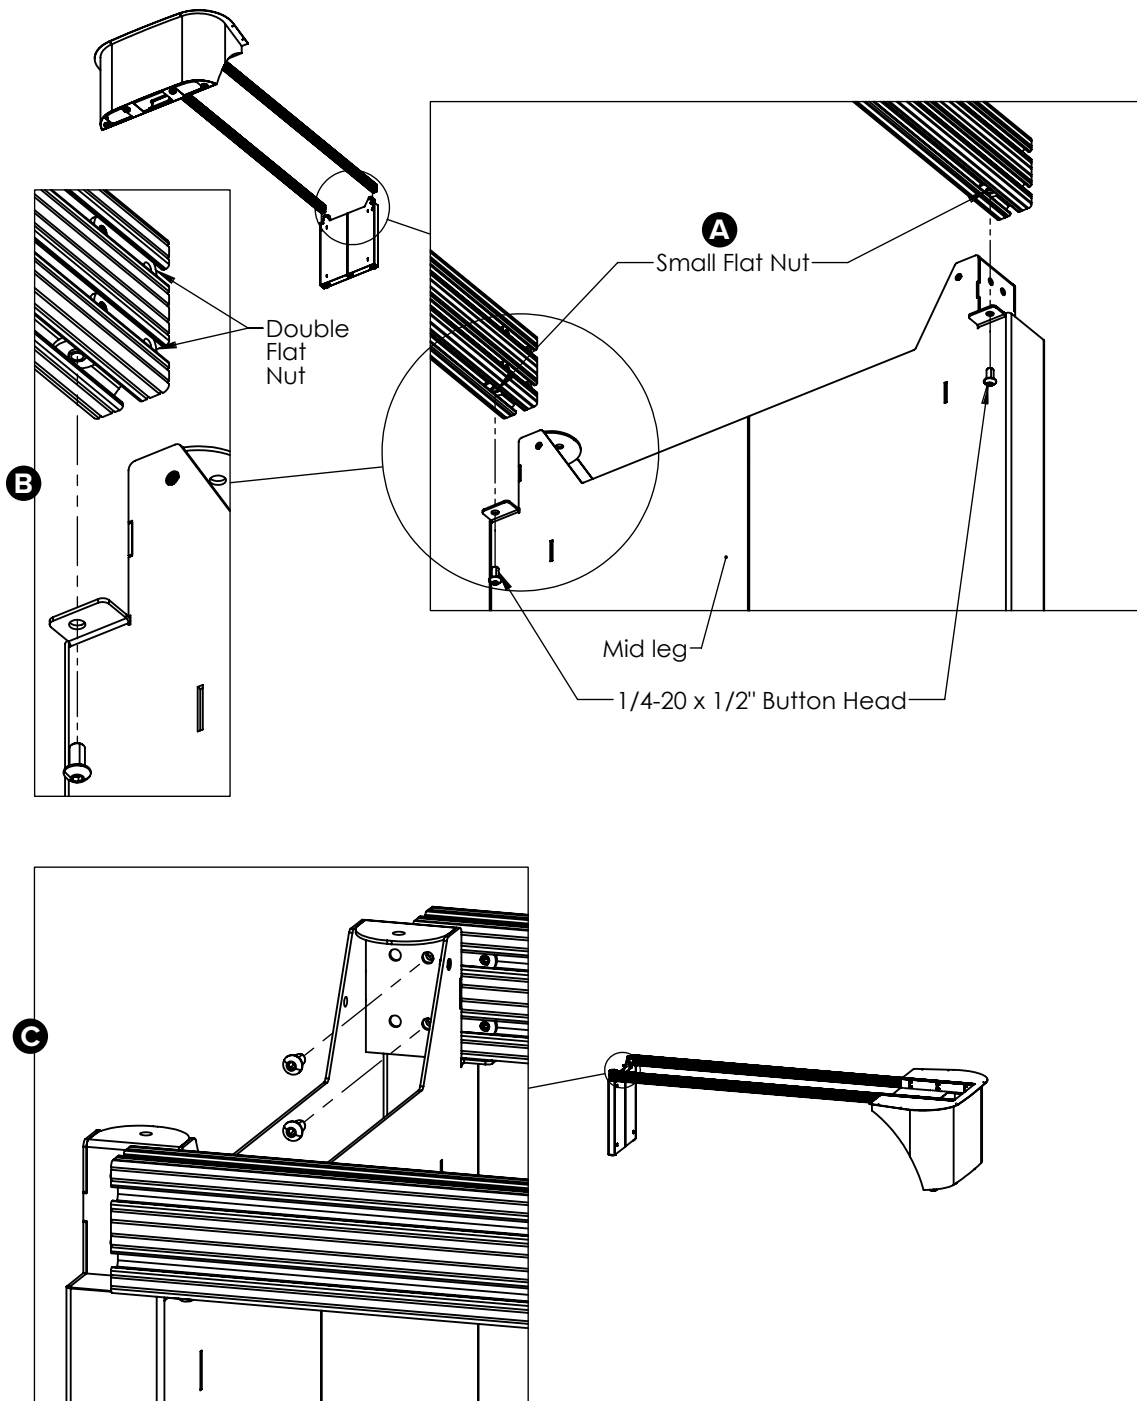


## 5. Attach L-Brackets

Install two Large L-Brackets using four 1/4-20 x 1/2" Button Head Screws and four Small Flat Nuts per bracket. Do not tighten. Location is not critical at this stage. Large L-Bracket locations will need to be adjusted in following steps. Repeat on opposite side, mirrored.

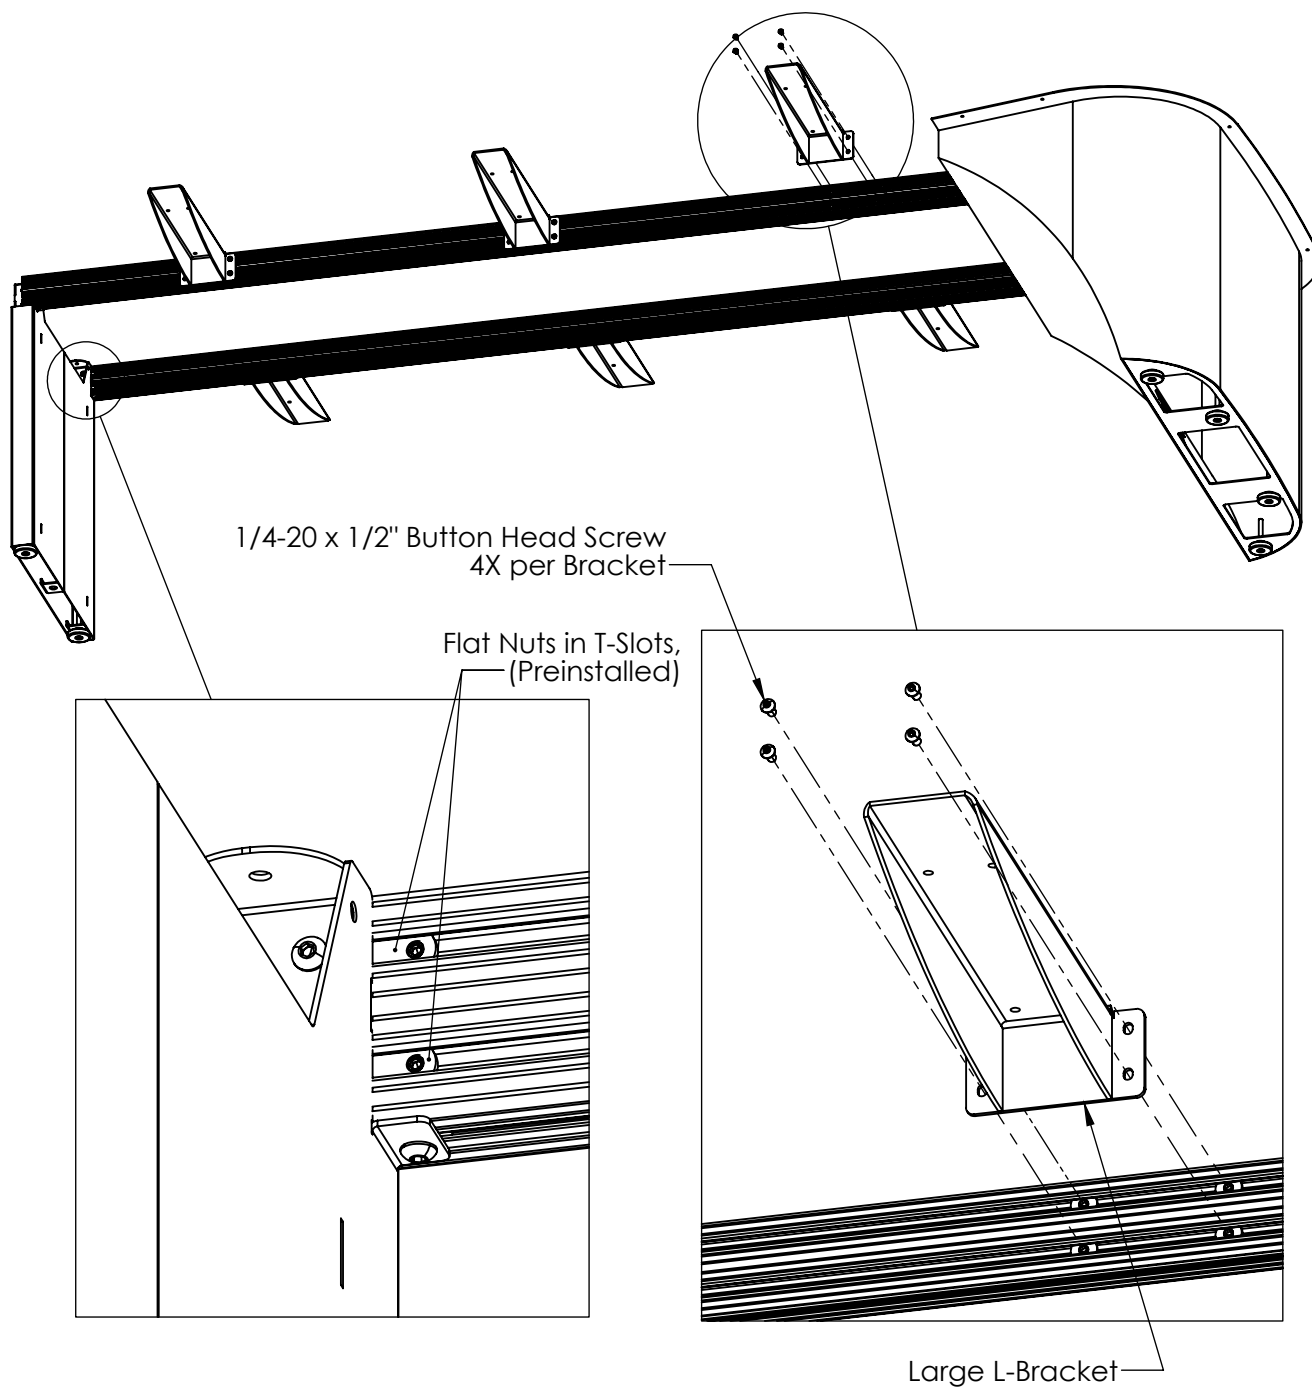


## 6. Attach Front Stretchers to Mid Leg

Screw two (per side) 1/4-20 x 1/2" Button Head Screws through the Mid Leg Brackets and into the preinstalled Double Flat Nuts.

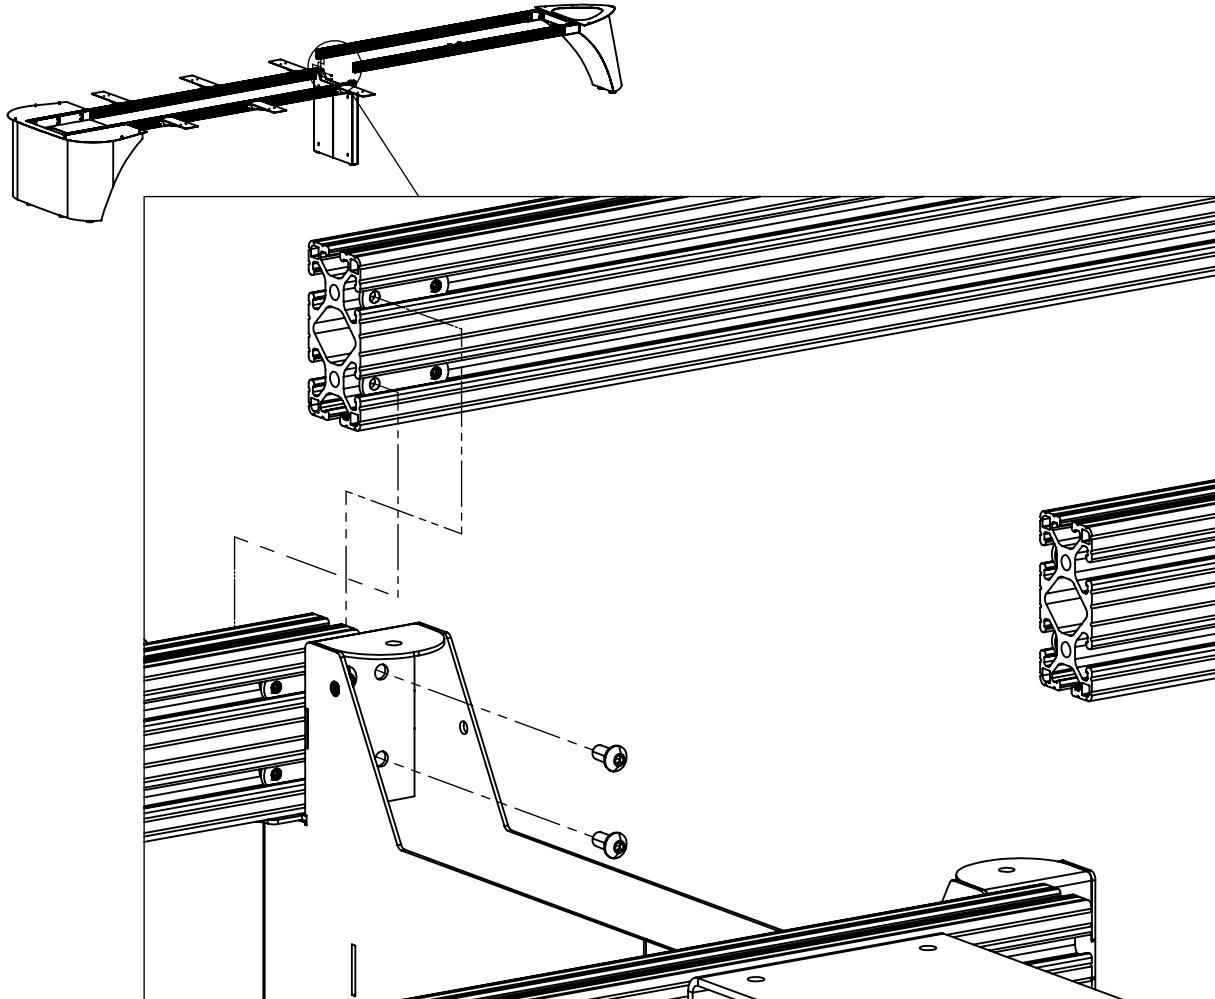

## 7. Adjust and Tighten Pedestal

Set the table pedestal to it's maximum length.  
Ensure gaps A and B are equal.

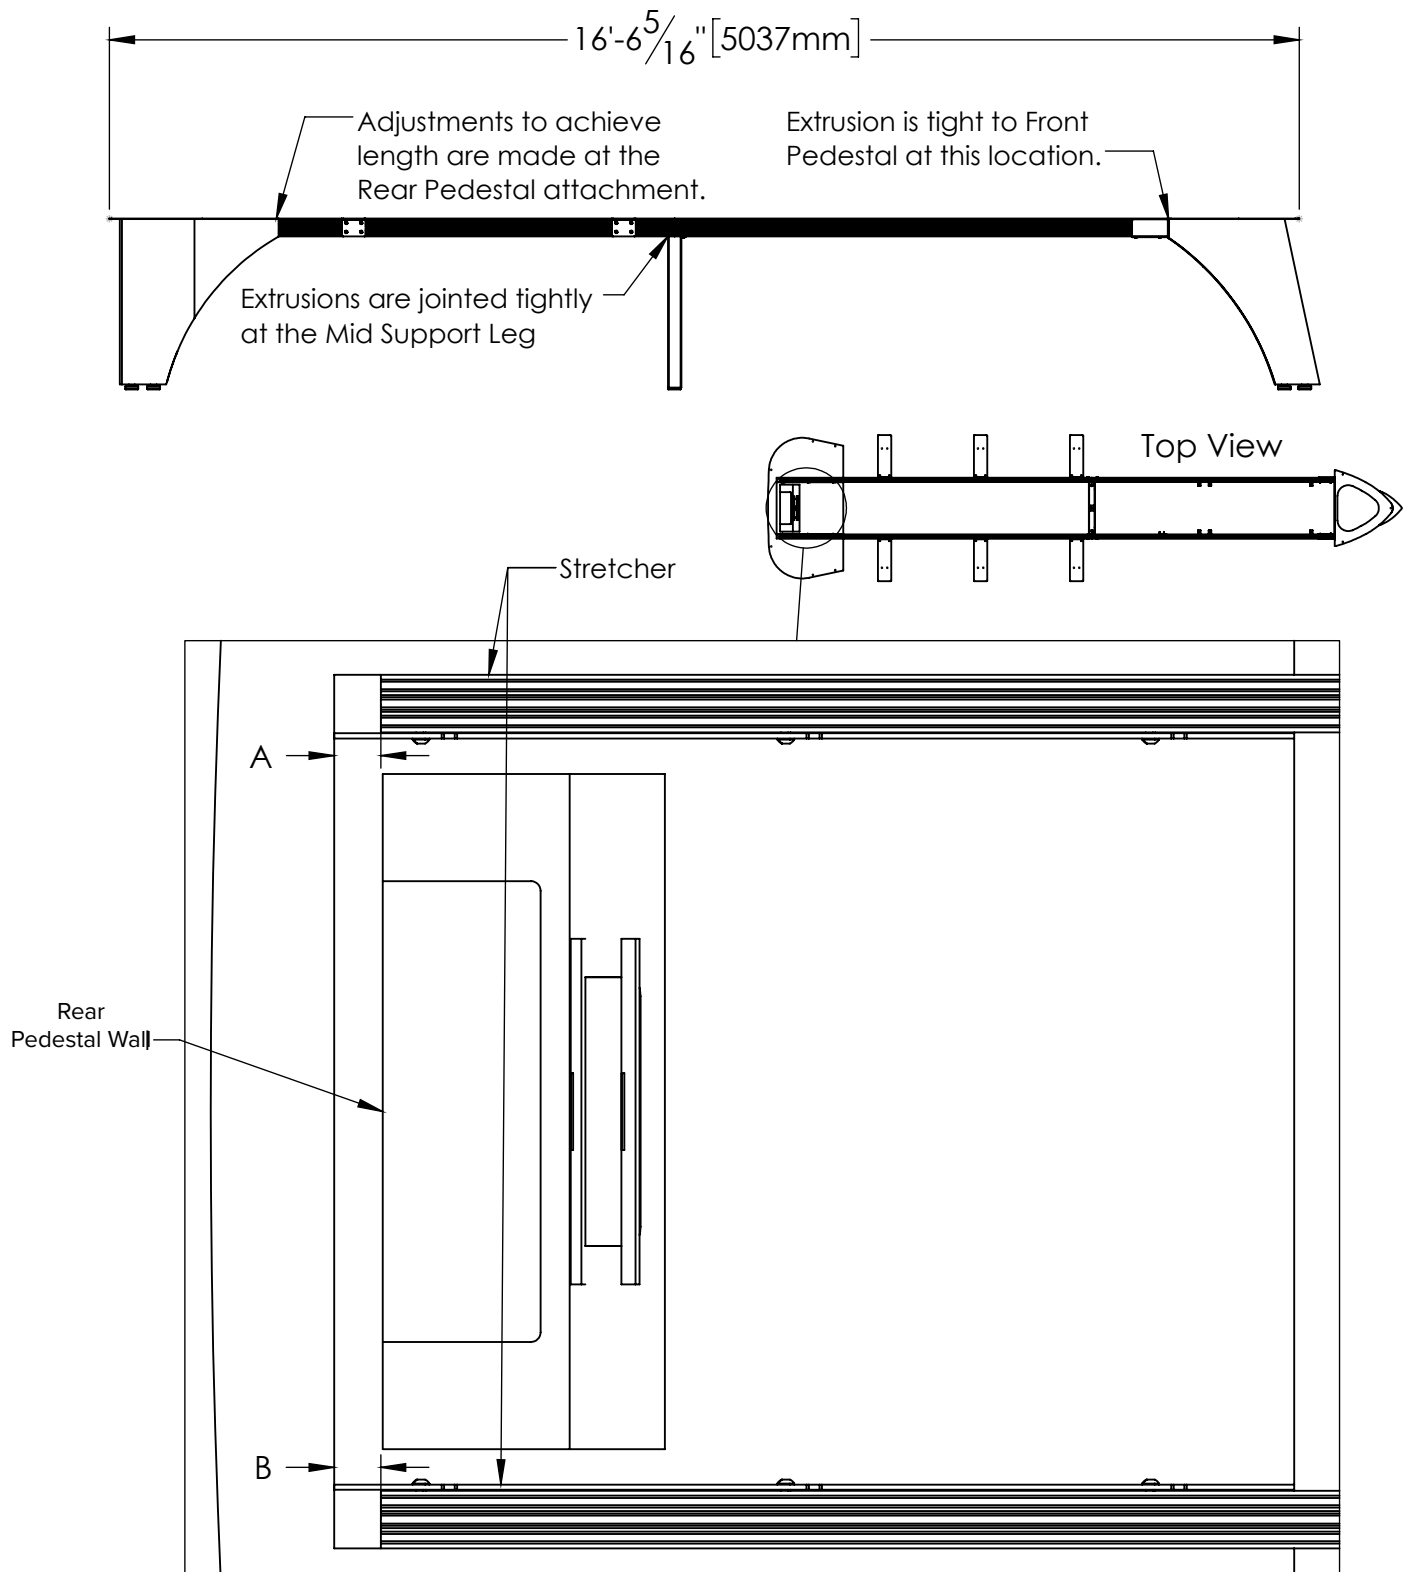

Measure between the back of the Stretchers and the Rear Wall. Verify the table length of 16'-6 <sup>5</sup>/<sub>16</sub>", and that both "A" and "B" are equal, then tighten the twelve Rear Pedestal bolts.



## 8. Level Pedestal Assembly


Check level of the assembly in both the length and width of the pedestal.

Adjust using the leveler feet installed under the pedestal assemblies with wrench provided.

## 9. Attach Top Section to Pedestals

Attach the rear section of the table top using six 1/4-20 x 5/8" Button Head Screws and six 1/4" bonded washers.



Do not tighten the screws.

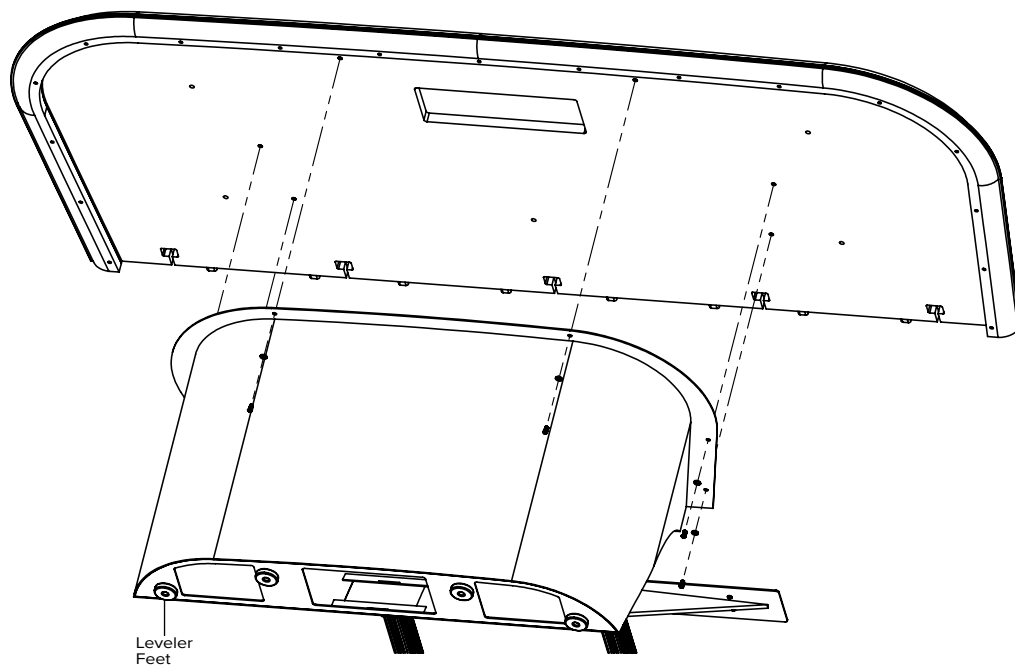

## 10. Insert Dominos


Press Dominos into slots of the table top.

**Note:** Dominos should be placed as each table top is installed.

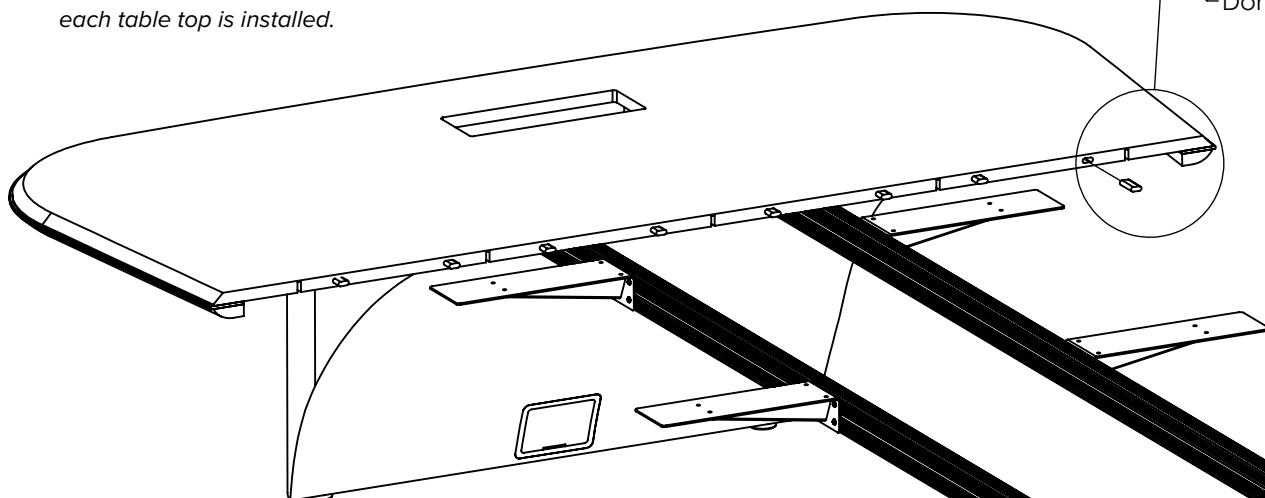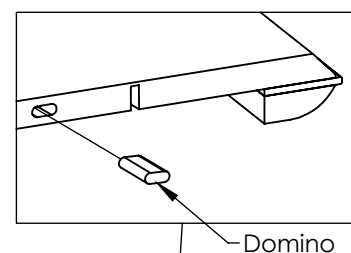


## 11. Attaching Top Segments

Attach the next table top section and slide to installed top while aligning dominos.

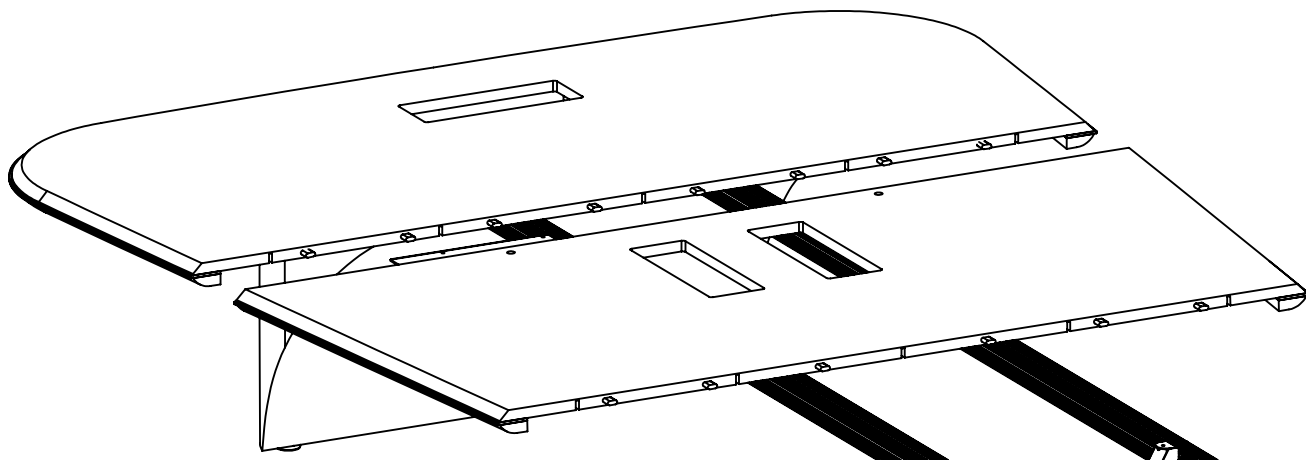


## 12. Fastening Top Joints

- A.** Install joint connectors into the pockets on the underside of the table top.
- B.** Tighten joint connectors from the middle outward, making sure the seams of both tops are flush.
- C.** Starting at the large end of the table, install each segment until the entire top has been assembled and Joint Connectors are tightened at all joints.

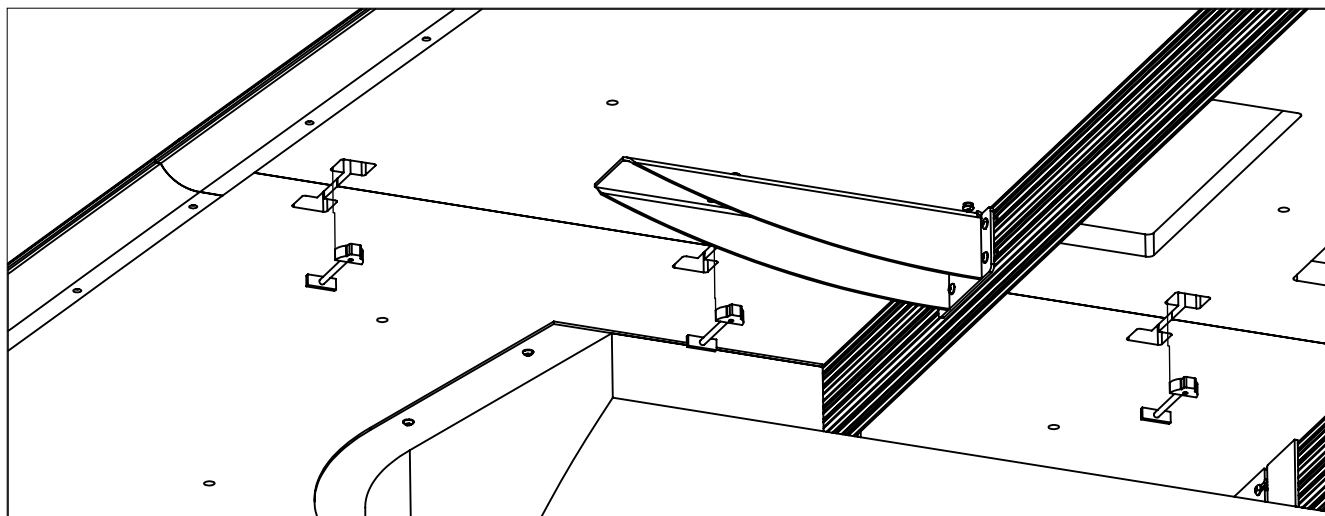

## 13. Fasten Pedestals


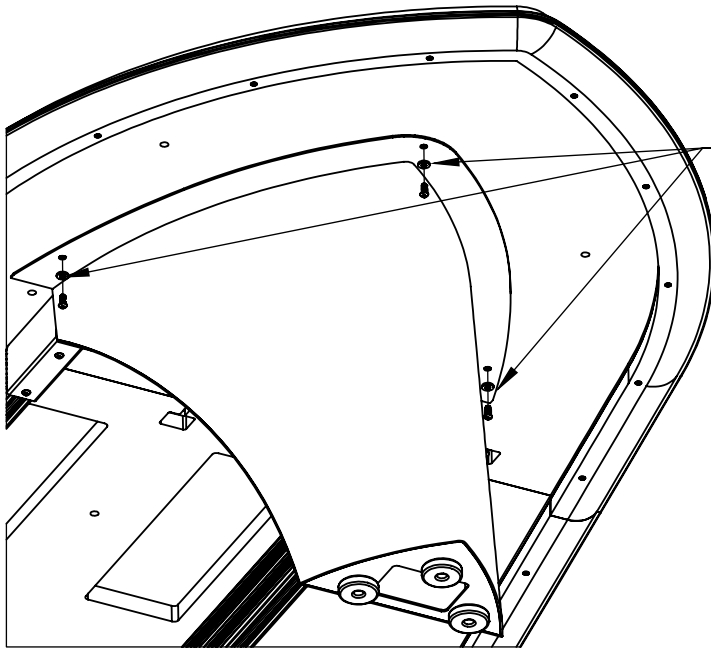


**A.** Install and tighten three 1/4-20 x 5/8" Button Head Screws and three 1/4" bonded washers at Front Pedestal.

**B.** Tighten screws in Rear Pedestal installed in Step 9.


## 14. Secure Brackets to Top

Tighten the (one per bracket) 1/4-20 x 5/8" button head screws to attach the brackets to the two table sections. Repeat this process for the small L-Brackets (one screw per bracket).

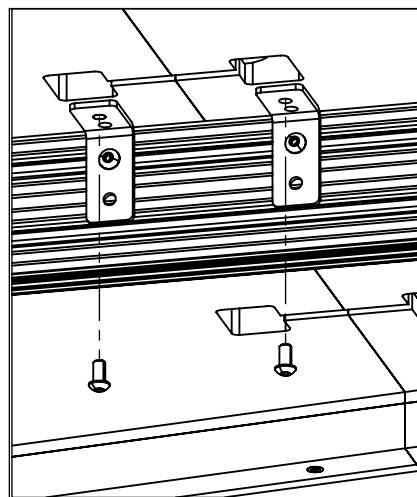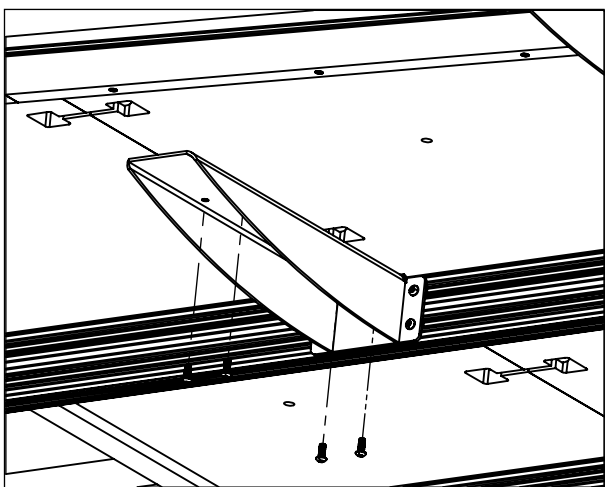

## 15. Secure Brackets to Frame


- A. Tighten the 1/4-20 x 1/2" button head screws to the stretchers.
- B. Using the Brackets, and tightening of them, adjust the table top for flatness.

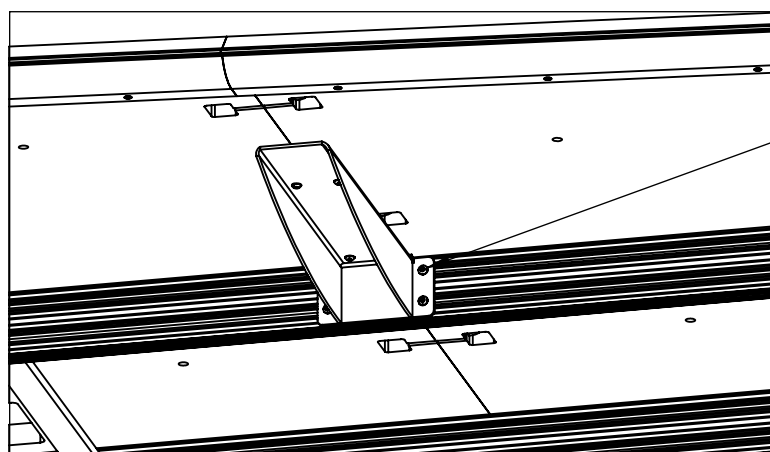


1/4-20 x 1/2"  
Button Head Screw (4x)

## 16. Install Wire Management

Install Wire Management Slats in the Stretcher's lower T-Slot spacing them evenly to complete the assembly.

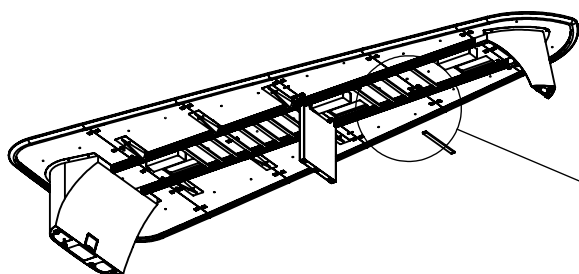

Wire Management Slat

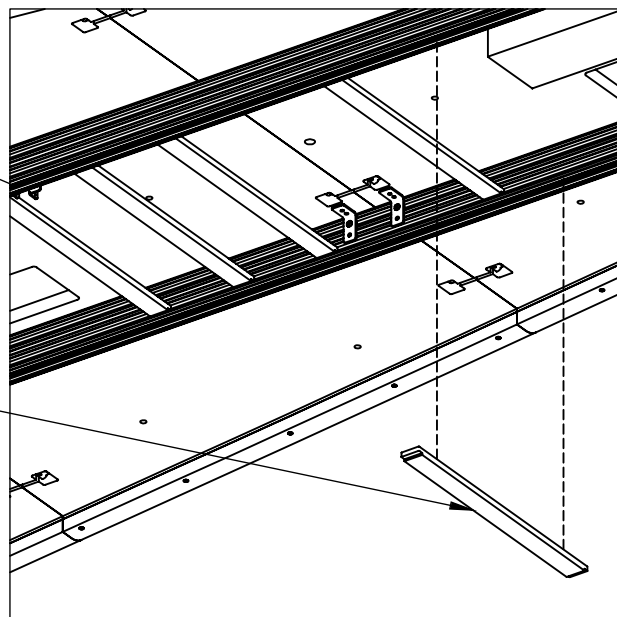

Please refer to the instructions for Cubbies and/or microphones for installation of selected accessories



### LIMITED WARRANTY FOR COMMERCIAL VIDEO DISPLAY STANDS AND MOUNTS

Salamander is proud to stand behind our products with industry-leading warranties. Should you ever encounter any problem with your Salamander product, let us know. We are here to make it right. 1.800.535.5659 - 860.761.9500

Full warranty including limitations and warranty claim information may be found at [www.salamanderdesigns.com/commercial/warranty](http://www.salamanderdesigns.com/commercial/warranty)