


Surface Hub Battery Storage Case Installation


FPSA/MSB


Electronic Stand Installation see pages 2-4 Fixed Height Stand Installation see pages 5-7

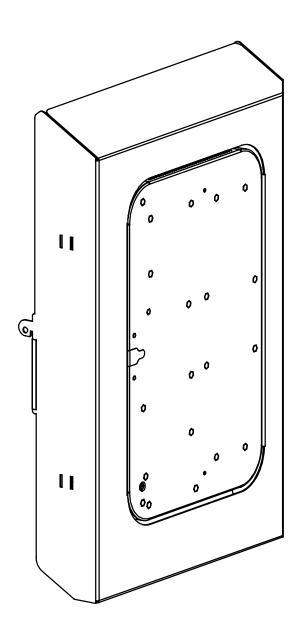

PARTS

ID	QTY	Part #	DESCRIPTION
Α	2	302-300	10-32 X 3/8" BUTTON HEAD CAP SCREWS
В	4	300-485	1/4-20 X 1/2" BUTTON HEAD SOCKET CAP SCREWS
С	1	400-080	5/32" HEX KEY
D	8	400-125	VELCRO ONE-WRAP STRAP, - 1/2 X 8" LONG
Е	1	300-496	5/32 x 25mm HEX BIT
F	6	300-515	1/4" ID X 5/8" OD NEOPRENE BONDED WASHER
G	1	400-170	1/8" HEX KEY
Н	4	300-532	1/4-20 NE NYLON LOCK NUT

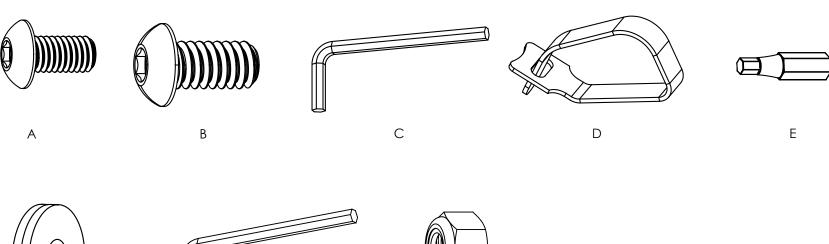

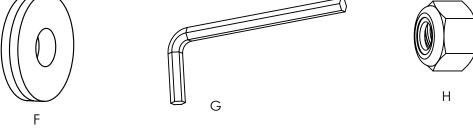


Surface Hub Battery Storage Case 501-738 v1.24 page 1 of 7

Installing on Electric Lift Mobile Stand

1. Bracket Install


Using the provided hex key, loosen the two screws indicated.

NOTE: Do not remove these screws as they are used to support internal components. Loosen only enough to install the two L Brackets as shown at right. Tighten only enough to maintain orientation shown.

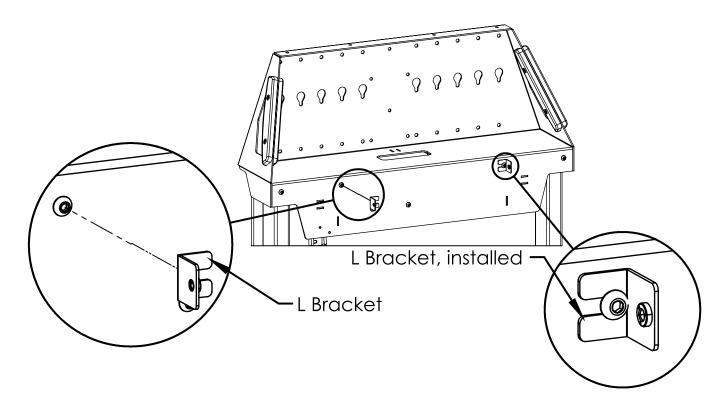

2. Bracket Alignment

- **A.** Attach the Storage Case by inserting the support tabs into the two slots ensuring that the two L Brackets fall inside of the Storage Case.
- **B.** Gently push the Storage Case down until the support tabs are seated in the slots.
- **C.** Secure the Storage Case by installing the two 10-32 x 3/8" button head cap screws through the support tabs and into the L Brackets.
- **D.** Tighten the L Bracket screws that were installed in the previous step.
- **E.** Remove the Storage Case by removing the $10-32 \times 3/8$ " button head cap screws.

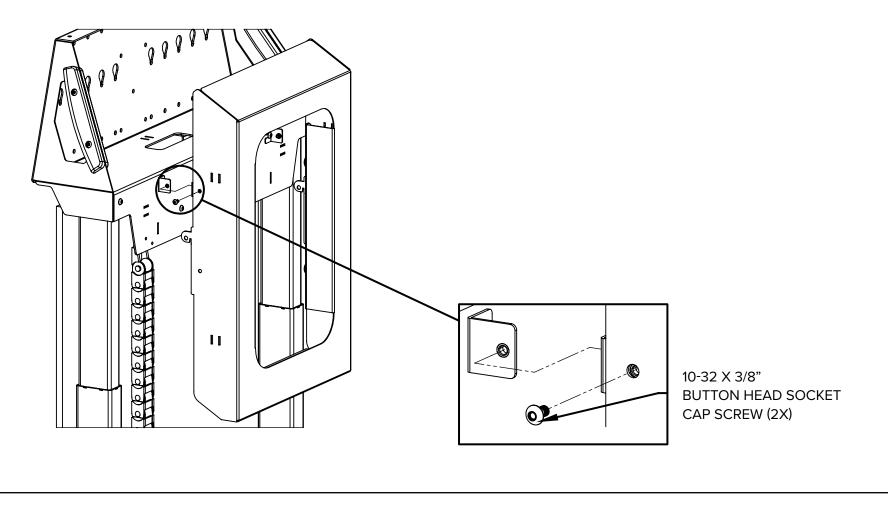


Surface Hub Battery Storage Case 501-738 v1.24 page 2 of 7

3. Secure Battery


Attach Battery to Storage Case using four screws (#300-485) and four washers (#300-515), rubber side down.

Tighten screws with hex key provided.

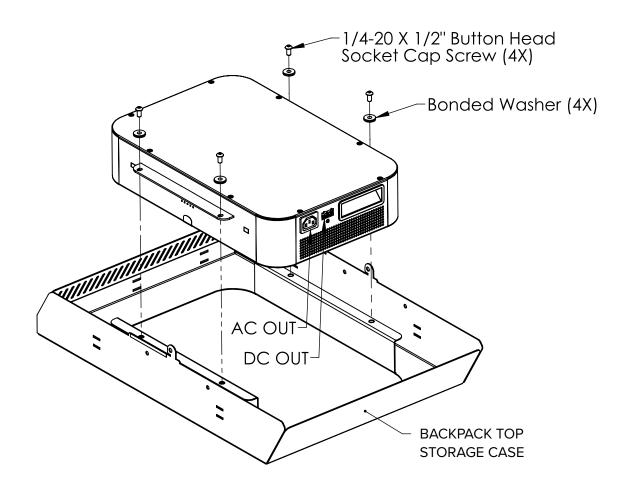

4. Install Battery and Storage Case

Resecure with the 10-32 fasteners as shown on step 2.

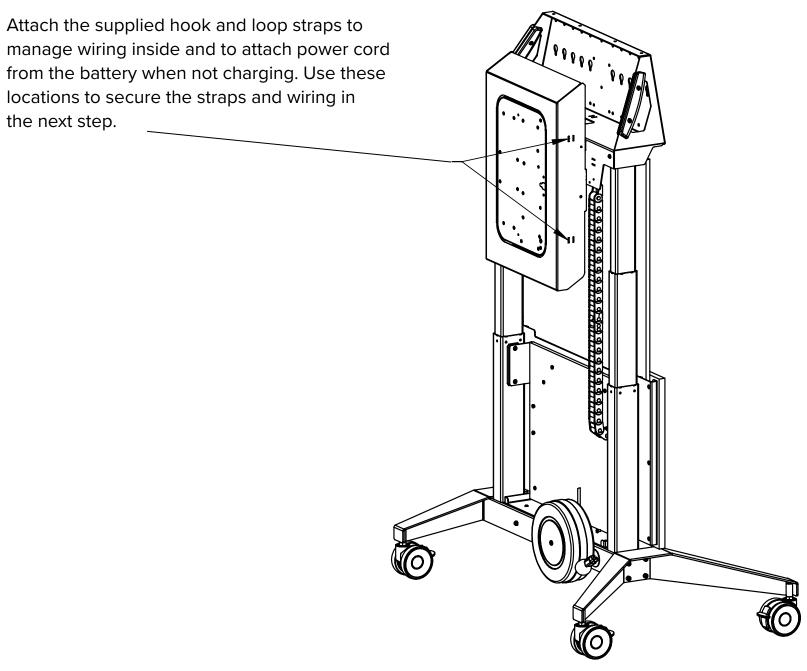

Surface Hub Battery Storage Case 501-738 v1.24 page 3 of 7


5. Wire Management

Manage cables carefully. Use cable ties to keep wires away from pinch points.

A. Plug AC and DC cables and USB into their respective locations on the Surface Hub then run the cables through the Stand and connect to Battery.

B. Route Cable from Display to Stand

Manage cables through cable chain by pushing cable through finger keeper on inner side of chain direction shown in arrows.

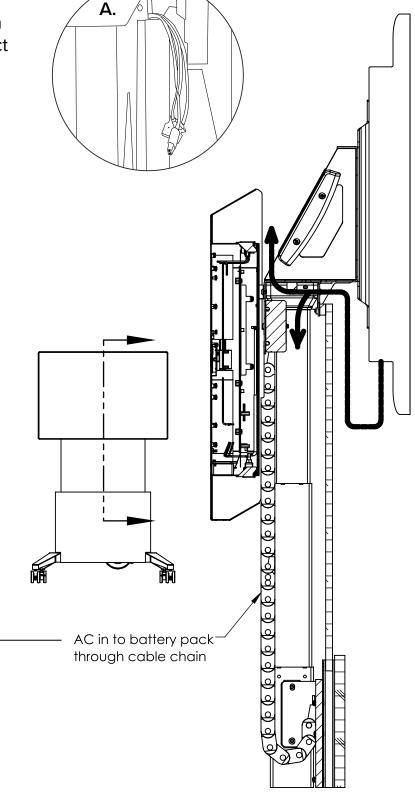


Surface Hub Battery Storage Case 501-738 v1.24 page 4 of 7

Installing on Fixed Height, Mobile Stand

1. Attach Brackets

Attach the two L Brackets loosely (but tight enough to maintain the orientation shown) through the drilled holes using the two $1/4-20 \times 1/2$ " Button Head Screws into the two $1/4-20 \times 1/2$ Nylon Lock Nuts.

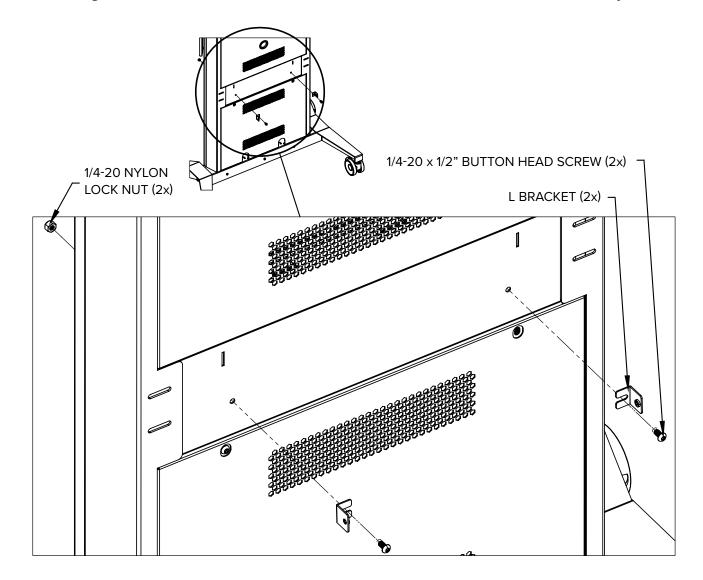

2. Bracket Alignment


Attach the Storage Case by inserting the support tabs into the two slots ensuring that the two L Brackets fall inside of the Storage Case.

Gently push the Storage Case down until the support tabs are seated in the slots.

Secure the Storage Case by installing the two $10-32 \times 3/8$ " button head cap screws through the support tabs and into the L Brackets.

Tighten the L Bracket screws that were installed in the previous step.


Remove the Storage Case by removing the 10-32 x 3/8" button head cap screws.

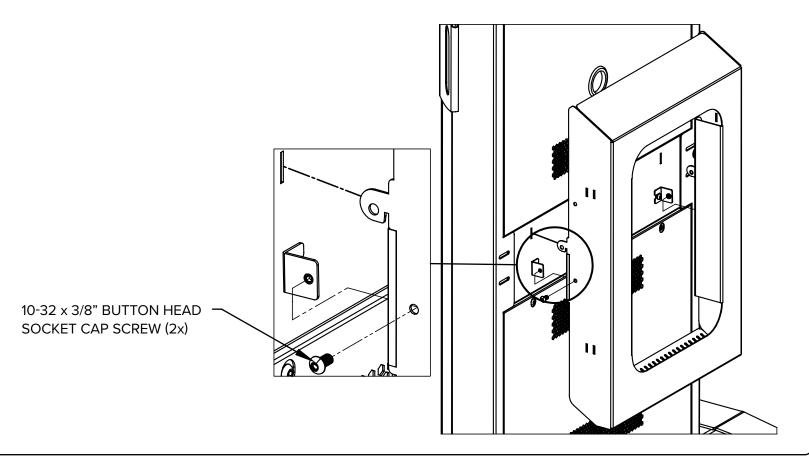

Surface Hub Battery Storage Case 501-738 v1.24 page 5 of 7

3. Secure Battery

Install the battery to the Storage Case using the four $1/4-20 \times 1/2$ " Button Head Cap Screws and Bonded Washers as shown. Ensure the Bonded Washers are installed with the rubber side down. Ensure that the battery is installed in the orientation shown, with the AC OUT and DC OUT ports at the top of the Storage Case.

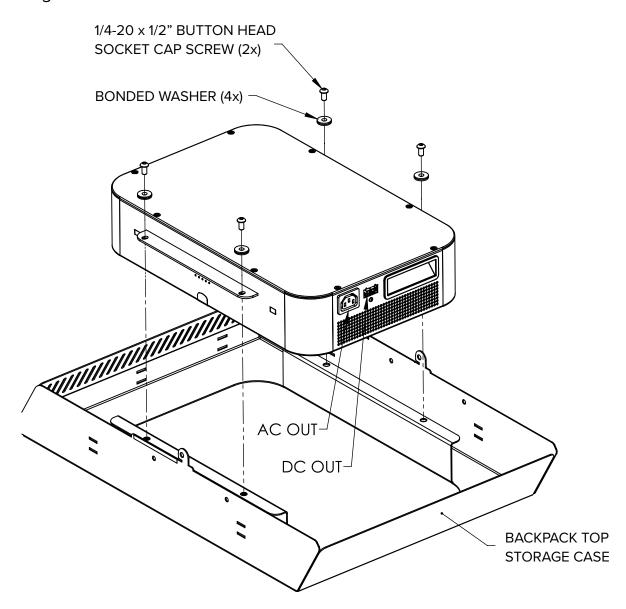


4. Install Cables and Storage Case – Run Cables Through Stand


Remove the Upper Rear Panel by first removing the two $1/4-20 \times 1/2$ " screws and then tipping the Panel back enough to allow lifting the Panel off of the two Upper Rear Panel Studs.

Next run wires thru the oval cutout behind the display and the grommeted hole in Upper Rear Panel and replace the Upper Rear Panel.

Plug in the AC Power Cord, then the cables from the stand and reinstall Backpack with battery and resecure with the 10-32 fasteners.

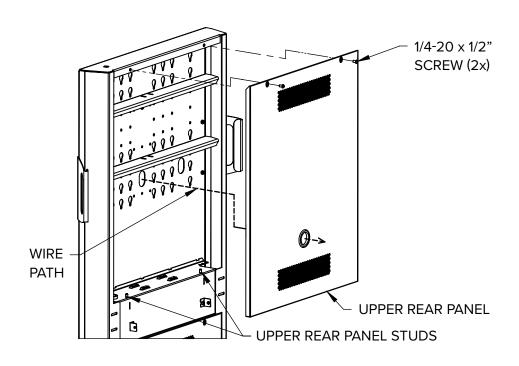

Surface Hub Battery Storage Case 501-738 v1.24 page 6 of 7

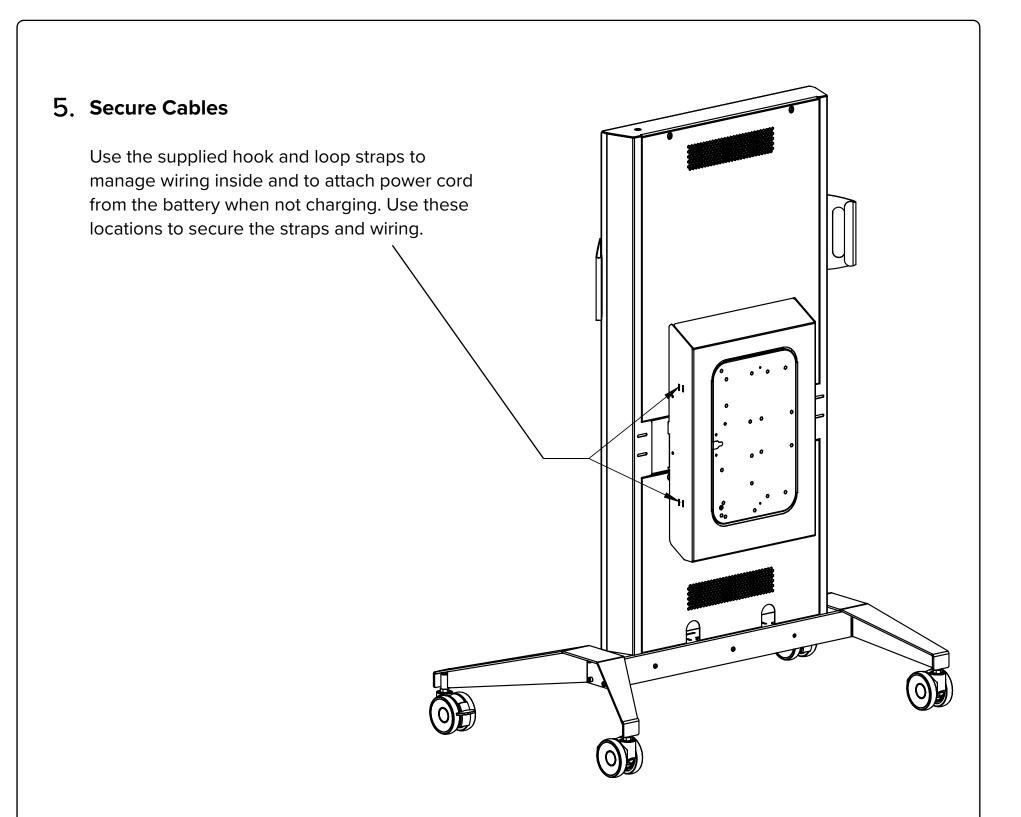



LIMITED WARRANTY FOR COMMERCIAL VIDEO DISPLAY STANDS AND MOUNTS

Salamander is proud to stand behind our products with industry-leading warranties. Should you ever encounter any problem with your Salamander product, let us know. We are here to make it right. 1.800.535.5659 - 860.761.9500

Full warranty including limitations and warranty claim information may be found at www.salamanderdesigns.com/commercial/warranty

Surface Hub Battery Storage Case 501-738 v1.24 page 7 of 7